Sprint Power Vision℠ Phone A920 by Samsung®

www.sprint.com

© 2005 Sprint Nextel. All rights reserved. Sprint, the "Going Forward" logo, and other trademarks are trademarks of Sprint Nextel.

Printed in Korea.

Table of Contents

Welcome to Sprint i

Introduction ii

Your Phone's Menu iii

Section 1: Getting Started 1

1A. Setting Up Service 3

Getting Started With Sprint PCS Service 4
Setting Up Your Voicemail 5
Sprint PCS Account Passwords 6
Getting Help 7

Section 2: Your Sprint PCS Phone 11

2A. Your Sprint PCS Phone: The Basics 13

Front View of Your Phone 14
Viewing the Display Screen 18
Features of Your Sprint PCS Phone 22
Turning Your Phone On and Off 24
Using Your Phone's Battery and Charger 25
Navigating Through Phone Menus 28
Displaying Your Phone Number 29
Making and Answering Calls 30
Entering Text 41

2B. Controlling Your Phone's Settings 45

Sound Settings 46
Display Settings 51
Location Settings 55
Messaging Settings 56
Airplane Mode 59
TTY Use With Sprint PCS Service 59

Updating Phone Software 61
Phone Setup Options 61
Call Setup Options 63

2C. Setting Your Phone's Security 67

Accessing the Security Menu 68
Using Your Phone's Lock Feature 68
Lock Service 70
Using Special Numbers 71
Erasing Contacts 72
Erasing My Content 72
Erasing Pic/Video 73
Resetting Your Phone 73
Security Features for Sprint PCS Vision℠ 74

2D. Controlling Your Roaming Experience 75

Understanding Roaming 76
Setting Your Phone's Roam Mode 78
Using Call Guard 79

2E. Managing Call History 81

Viewing History 82
Call History Options 82
Making a Call From Call History 83
Saving a Phone Number From Call History 84
Prepending a Phone Number From Call History 85
Erasing Call History 85

2F. Using Contacts 87

Adding a New Contacts Entry 88
Finding Contacts Entries 89
Contacts Entry Options 91
Adding a Phone Number to a Contacts Entry 92
Editing a Contacts Entry's Phone Number 92
Assigning Speed Dial Numbers 93

Editing a Contacts Entry 94
Selecting a Ringer Type for an Entry 94
Dialing Sprint PCS Services 95

2G. Using the Phone's Scheduler and Tools 97

Using Your Phone's Scheduler 98
Using Your Phone's Alarm Clock 101
Using Your Phone's Memo Pad 103
Using Your Phone's Tools 104

2H. Using Your Phone's Voice Services 107

Using Voice-Activated Dialing 108
Using Call <Name or #> 109
Using Send Text <Name> 115
Using Lookup <Name> 116
Using Go To <App> 116
Using Check <Item> 117
Managing Voice Memos 119

2I. Using the TransFLASH™ Card 121

Using Your Phone's TransFLASH Card and Adapter 122

2J. Using the Built-in Camera 125

Taking Pictures 126
Storing Pictures 132
Recording Videos 134
Storing Videos 137
Sending Sprint PCS Picture Mail[SM] 137
Managing Sprint PCS Picture Mail 141
Printing Pictures Using PictBridge 147
Settings and Info 149

2K. Using Your Phone's Built-in Media Player 151

Your Multimedia Channel Options 152
Accessing Your Media Player's Channel Listings 153
Playing a Video or Audio Clip 154
Multimedia FAQs 155

2L. Using Bluetooth Wireless Technology 159

Turning Bluetooth On and Off 160
Using the Bluetooth Settings Menu 161
Bluetooth Profiles 163
Pairing Bluetooth Devices 164

Section 3: Sprint PCS Service Features 167

3A. Sprint PCS Service Features: The Basics 169

Using Voicemail 170
Using Text SMS Messaging 179
Using Voice SMS Messaging 182
Using Caller ID 185
Responding to Call Waiting 185
Making a Three-Way Call 186
Using Call Forwarding 187

3B. Sprint PCS Vision℠ 189

Sprint PCS Vision Applications 190
Getting Started With Sprint PCS Vision 191
Accessing Messaging 197
Downloading Premium Services Content 201
Exploring the Web 205
Sprint PCS Vision FAQs 209

3C. Sprint Power Vision℠ 211

Getting to Know Sprint Power Vision 212
Exploring the Sprint Music Store℠ 213
Personalizing Your Service With On Demand 217

Using Your Sprint PCS Phone as a Modem 220

3D. Sprint PCS Voice Command℠ 223

Getting Started With Sprint PCS Voice Command 224
Creating Your Own Address Book 225
Making a Call With Sprint PCS Voice Command 226
Accessing Information Using Sprint PCS Voice Command .. 227

Section 4: Safety and Warranty Information 229

4A. Important Safety Information 231

General Precautions 232
Maintaining Safe Use of and Access to Your Phone 233
Caring for the Battery 235
Radiofrequency (RF) Energy 236
Owner's Record 238
Phone Guide Proprietary Notice 238

4B. Manufacturer's Warranty 239

Manufacturer's Warranty 240

Index 245

Welcome to Sprint

Sprint is committed to bringing you the best wireless technology available. We built our complete, nationwide network from the ground up, so all your services – whether it's Voicemail, Caller ID, Email, or Sprint PCS Picture Mail – will work the same wherever you go on the Nationwide Sprint PCS Network.

This guide will familiarize you with our technology and your new Sprint Power Vision Phone through simple, easy-to-follow instructions. It's all right here – from setting up your account passwords and voicemail to using the most advanced features of Sprint Power Vision.

Welcome and thank you for choosing Sprint.

Introduction

This **Phone Guide** introduces you to Sprint PCS Service and all the features of your new phone. It's divided into four sections:

- **Section 1:** Getting Started
- **Section 2:** Your Sprint POwer Vision Phone
- **Section 3:** Sprint Service Features
- **Section 4:** Safety and Warranty Information

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

Phone Guide Note:	Due to updates in phone software, this printed guide may not be the most current version for your phone. Visit www.sprint.com and sign on to **My PCS** to access the most recent version of the phone guide.

WARNING	Please refer to the **Important Safety Information** section on page 231 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death, or property damage.

Your Phone's Menu

The following list outlines your phone's menu structure. For more information about navigating through the menus, please see "Navigating Through Phone Menus" on page 28.

Press **Menu** to display the following:

OPTIONS (RIGHT SOFTKEY)		
1: Menu Style		
1: 3x4 Style	2: List Style	
2: Focus Effect		
1: None 4: Drop	2: Warp 5: Water	3: Fire
3: Background		
1: Preset Images	2: My Content	3: My Albums
WEB		
CALL HISTORY		
1: Outgoing Calls		
2: Incoming Calls		
3: Missed Calls		
4: Recent Calls		
MEDIA PLAYER		
1: Channel Listing		
2: Memory Card		
3: My Play List		
ON DEMAND		
MISSED ALERTS		

MUSIC	
MY CONTENT	
1: Games	
1: Get New Games	2: My Content Manager Games
2: Ringers	
1: Get New Ringers	2: My Content Manager Ringers
3: Screen Savers	
1: Get New Screen Savers	2: My Content Manager Screen Savers
4: Applications	
1: Get New Applications	2: My Content Manager Applications
5: IM & Email	
1: Get New IM & Email	2: My Content Manager IM & Email
6: Call Tones	
MESSAGING	
1: Send Message	
1: Text 3: Hand. Msg	2: Picture Mail 4: VoiceSMS
2: Text Message	
1: Inbox 3: Drafts	2: Outbox 4: Send Text
3: Picture Mail	
1: Inbox 3: Saved Mail	2: Sent Mail 4: Pending
4: Voice SMS	
5: IM & Email	
1: Instant Messaging 3: AOL 5: Yahoo! 7: Other	2: PCS Mail 4: MSN 6: Earthlink
6: Voicemail	

1: Call Voicemail	2: Clear Envelope	
7: Chat & Dating		
8: Premium Msg		
9: Settings		
1: General		
1: Notification		
1: Message & Icon	2: Icon Only	
2: Preset Messages		
1: Can't talk right now. Send me a message.		2: Call me
3: Where are you?	4: Can you pick up	5: Meet me at
6: Let's get lunch.	7: The meeting has been cancelled.	
8: I'll be there at	9: What time does it start?	
10: I love you!	11: [Empty]	12: [Empty]
13: [Empty]	14: [Empty]	15: [Empty]
16: [Empty]	17: [Empty]	18: [Empty]
19: [Empty]	20: [Empty]	
3: Edit Signature (On/Off)		
4: Message Alert		
1: Volume		
1: Voicemail	2: Text Message	3: Picture Mail
2: Type		
1: Voicemail	2: Text Message	3: Picture Mail
3: Reminder		
1: Off	2: Once	3: Every 2 min
5: Auto-Erase (Yes/No)		
2: Text Message		
1: Save in Outbox (Yes/No)	2: Priority (Normal/Urgent)	
3: Call Back # (None/xxxxxxxxxx/Other)		
3: Voice SMS Opt.		
1: Speaker Phone (On/Off)	2: From Name	
TOOLS		
1: Voice Service		

2: Voice Memo		
1: Record	2: Review	
3: Bluetooth		
4: Planner		
1: Today 3: Task List	2: Scheduler 4: Countdown	
5: Memo Pad		
6: World Time		
1: Set DST		
7: Alarm Clock		
1: Alarm #1 3: Alarm #3	2: Alarm #2	
8: Calculator		
9: Set Time (displayed when there is no time information)		
PICTURES		
1: Camera Press the right softkey while in camera mode to view the following options:		
1: Flash		
1: Off	2: On this shot	3: Always On
2: Self-Timer		
1: Off	2: 5 Seconds	3: 10 Seconds
3: Fun Tools..		
1: Fun Frames		
1: Off 4: Roses for Love 7: Winter Greetings	2: Blue 5: Top Secret	3: Love 6: Under the Sea
2: Color Tones		
1: Auto 4: Sepia	2: Monochrome 5: Blue	3: Green
4: Controls..		

1: Brightness		
2: White Balance		
1: Auto 4: Tungsten	2: Sunny 5: Fluorescent	3: Cloudy 6: Manual
5: Settings..		
1: Resolution		
1: 1.3MP: 1280x960 4: Low: 320x240	2: High: 800x600	3: Med: 640x480
2: Quality		
1: Fine	2: Normal	3: Economy
3: Shutter Sound		
1: Off 4: Shutter 3	2: Shutter 1 5: Say Cheese	3: Shutter 2
4: View Mode		
1: Wide Screen	2: Full Screen	
6: Review Media		
7: Camcorder		
8: Save To..		
1: In Phone	2: In Memory Card	
2: Camcorder (Video Mail/Long Video) Press the right softkey while in camcorder mode to view the following options		
1: Movie Light		
1: Off	2: On This Movie	3: Always On
2: Self-Timer		
1: Off	2: 5 Seconds	3: 10 Seconds
3: Color Tones		
1: Auto 4: Sepia	2: Monochrome 5: Blue	3: Green
4: Controls..		
1: Brightness		

2: White Balance		
1: Auto 4: Tungsten	2: Sunny 5: Fluorescent	3: Cloudy 6: Manual
5: Settings..		
1: Quality		
1: Fine	2: Normal	3: Economy
6: Review Media		
7: Camera Mode		
8: Save To..		
1: In Phone	2: In Memory Card	
3: Picture Mail		
1: Inbox 3: Saved Mail	2: Sent Mail 4: Pending	
4: My Albums		
1: In Phone 3: Online Albums	2: Memory Card	
5: Order Prints		
6: PictBridge Print		
7: Settings & Info		
1: Save To		
1:In Phone	2: In Memory Card	
2: Account Info		
3: View Mode		
1: Portrait View	2: Landscape View	
CONTACTS		
1: Find		
2: Add New Entry		
3: My Phone #		
4: Speed Dial #s		

5: Group

1: Unassigned 2: Family
3: Friends 4: Colleague
5: VIPs 6: Empty
7: Empty

6: My Name Card

7: Services

1: Account Info 2: Customer Service
3: Dir Assist

SETTINGS

1: Display

1: Screen Saver

1: Main LCD

1: Preset Images

1: Image Gallery 01 2: Image Gallery 02 3: Image Gallery 03
4: Image Gallery 04 5: Image Gallery 05 6: Image Gallery 06
7: Image Gallery 07

2: My Content

1: Images 2: Videos

3: My Albums

1: In Phone 2: In Memory Card

2: Sub LCD

1: Preset Images

1: Analog 2: Digital 1 3: Digital 2

2: My Content

3: Main LCD Pic

2: Set Foreground

1: Digital Clock 2: Calendar 3: Others

3: Incoming Call

1: With Caller ID

1: Preset Animation

2: My Content		
3: My Albums		
1: In Phone	2: In Memory card	
2: No Caller ID		
1: Preset Animation		
2: My Content		
3: My Albums		
1: In Phone	2: In Memory Card	
4: Dialing Font		
1: Color		
1: Basic 4: Hyphenate	2: Rainbow	3: Monochrome
2: Size (Large/Medium/Small)		
5: Greeting (Sprint/Custom)		
6: Backlight		
1: Main Display		
1: Flip Open 4: 8 seconds	2: 30 seconds	3: 15 seconds
2: Keypad		
1: Flip Open 4: 8 seconds	2: 30 seconds 5: Off	3: 15 seconds
3: Pwr Save Mode (On/Off)		
4: Brightness		
1: Highest 4: Low	2: High 5: Lowest	3: Medium
7: Service Light (On/Off)		
8: Text Entry		
1: Display Candidate (Display On/Off)		
2: Sounds		
1: Ringer Type		

1: Voice Calls		
1: With Caller ID		
1: Single Tones 4: My Content	2: Ring Tones	3: Melodies
2: No Caller ID		
1: Single Tones 4: My Content	2: Ring Tones	3: Melodies
2: Messaging		
1: Voicemail	2: Text Message	3: Picture Mail
3: Scheduler		
1: Single Tones 4: My Content	2: Ring Tones	3: Melodies
4: Roam Ringer (Normal/Distinctive)		
2: Volume		
1: Ringer		
1: Ringer Off (Always Vibrate)	2: 1-Beep	3: Level 1 - 8
2: Text Message		
1: Use Ringer Volume	2: Separate Volume	3: Always Vibrate
3: Picture Mail		
1: Use Ringer Volume	2: Separate Volume	3: Always Vibrate
4: Voice Mail		
1: Use Ringer Volume	2: Separate Volume	3: Always Vibrate
5: Alarms		
1: Use Ringer Volume	2: Separate Volume	3: Always Vibrate
6: App. Volume		
1: Volume		
1: Use Ringer Volume	2: Separate Volume	
2: Game Vibrate (On/Off)		
3: Alerts		

1: Minute Beep (On/Off)	2: Service (On/Off)	3: Connect (On/Off)
4: Sig. Fade Tone (On/Off)	5: Power On/Off (On/Off)	
4: Key Tone		
1: Tone Type		
1: DTMF	2: Rain Drop	3: Voice
2: Tone Level		
1: Silence All	2: Level 1-8	
3: Tone Length		
1: Short	2: Long	
3: Power Vision		
1: Enable/Disable Vision	2: Net Guard (On/Off)	3: Update Profile
4: Voice Service		
1: Choice Lists		
1: Automatic	2: Always On	3: Always Off
2: Sensitivity		
1: Reject More	2: Recommended	3: Reject Less
3: Digit Dialing		
1: Adapt Digits	2: Reset Digits	
4: Sound		
1: Prompts (On/Off)		
2: Digits (On/Off)		
3: Names (On/Off)		
4: Name Settings		
1: Speed		
1: Faster	2: Recommended	3: Slower
2: Volume		
1: Louder	2: Recommended	3: Softer
5: Voice Launch		
1: Talk Key	2: Talk Key and Flip Open	

6: About		
5: Security		
1: Lock Phone		
1: Unlocked	2: On Power-Up	3: Lock Now
2: Lock Pic/Video (On/Off)		
3: Lock Services		
1: Voice: Lock/Unlock	2: Power Vision: Lock/Unlock	
4: Change Lock		
5: Special #		
1: Empty	2: Empty	3: Empty
6: Erase Contacts (Yes/No)		
7: Erase My Content (Yes/No)		
8: Erase Pic/Video (Yes/No)		
9: Reset Phone (Yes/No)		
6: Roaming		
1: Set Mode		
1: Automatic	2: Roaming only	3: Sprint
2: Call Guard (On/Off)		
7: Launch Pad		
1: Up Key		
1: Contacts	2: Voice Memo	3: Scheduler
4: Messaging	5: Voice Service	6: Ringer Type
7: My Content	8: Display	9: Alarms
10: Calculator	11: Media Player	12: Web
13: Inbox	14: VoiceSMS Inbox	15: Send Text
16: Send VoiceSMS	17: Missed Alerts	18: Music

2: Down Key		
1: Contacts	2: Voice Memo	3: Scheduler
4: Messaging	5: Voice Service	6: Ringer Type
7: My Content	8: Display	9: Alarms
10: Calculator	11: Media Player	12: Web
13: Inbox	14: VoiceSMS Inbox	15: Send Text
16: Send VoiceSMS	17: Missed Alerts	18: Music
3: Left Key		
1: Contacts	2: Voice Memo	3: Scheduler
4: Messaging	5: Voice Service	6: Ringer Type
7: My Content	8: Display	9: Alarms
10: Calculator	11: Media Player	12: Web
13: Inbox	14: VoiceSMS Inbox	15: Send Text
16: Send VoiceSMS	17: Missed Alerts	18: Music
4: Right Key		
1: Contacts	2: Voice Memo	3: Scheduler
4: Messaging	5: Voice Service	6: Ringer Type
7: My Content	8: Display	9: Alarms
10: Calculator	11: Media Player	12: Web
13: Inbox	14: VoiceSMS Inbox	15: Send Text
16: Send VoiceSMS	17: Missed Alerts	18: Music
8: Others		
1: Call Setup		
1: Abbrev. Dial (On/Off)		
2: Contacts Match (On/Off)		
3: Restriction		
1: Outgoing Call		
1: Allow all	2: Contacts Only	3: Special# Only
4: Call Answer		
1: Any Key	2: Talk Key	3: Flip Open
5: Auto Answer (Car Kit/Headset) (Yes/No)		
2: Language		
1: English	2: Español	
3: Airplane Mode (On/Off/On Power Up)		

4: Location (On/Off)		
5: Key Guard		
1: Flip-closed	2: After 5 Seconds	3: Off
6: Audio Routing		
1: Normal	2: Headset only	
7: TTY Mode		
1: TTY Full 4: TTY Off	2: TTY+Hear	3: TTY+Talk
8: Update Phone Software		
9: Phone Info		
1: Phone Number 3: Version 5: Memory Status (All/Phone/Card)	2: Icon Glossary 4: Advanced	
0: Bluetooth		
1: Enable (On/Off)		
2: Visibility		
1: Always Visible	2: Visible for 3min	3: Hidden
3: Device Name		
4: Device Info		
IN USE MENU		
Press Options (Right Softkey) to display the following options:		
1: Key Mute/Unmute 4: 3-Way Call 7: Tools	2: Contacts 5: Call History 8: Phone Info	3: Messaging 6: Voice Memo

Getting Started

Setting Up Service

In This Section

- Getting Started With Sprint PCS Service
- Setting Up Your Voicemail
- Sprint PCS Account Passwords
- Getting Help

Setting up service on your new Sprint PCS Phone is quick and easy. This section walks you through the necessary steps to unlock your phone, set up your voicemail, establish passwords, and contact Sprint for assistance with your Sprint PCS Service.

Getting Started With Sprint PCS Service

Determining if Your Phone is Already Activated

If you purchased your phone at a Sprint Store, it is probably activated, unlocked, and ready to use. If you received your phone in the mail, it probably has been activated; all you need to do is unlock it.

If your phone is not activated, please refer to the activation card included with your phone.

Unlocking Your Phone

To unlock your phone, follow these easy steps:

1. Press to turn the phone on.
2. Press **Unlock** ( ).

Note:	To select a softkey, press the softkey button directly below the softkey text that appears at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not appear if there is no corresponding action available.

3. Enter your four-digit lock code. (For security purposes, the code is not visible as you type.)

Tip:	If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone number or try 0000 or NATL (6285). If none of these work, call Sprint Customer Service at 1-888-211-4PCS (4727).

Setting Up Your Voicemail

All unanswered calls to your Sprint PCS Phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your Sprint PCS Phone is activated.

To set up your voicemail:

1. From standby mode, press and hold .
2. Follow the system prompts to:
   - Create your passcode
   - Record your name announcement
   - Record your greeting
   - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding , bypassing the need for you to enter your passcode)

Note:	**Voicemail Passcode** If you are concerned about unauthorized access to your voicemail account, Sprint recommends you enable your voicemail passcode.

For more information about using your voicemail, see “Using Voicemail” on page 170.

Sprint PCS Account Passwords

As a Sprint PCS customer, you enjoy unlimited access to your personal account information, your voicemail account, and your Sprint PCS Vision or Sprint Power Vision account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

Account Password

If you are the account owner, you'll have an account password to sign on to www.sprint.com and to use when calling Sprint Customer Service. Your default account password is the last four digits of your Social Security number. If you are not the account owner (if someone else receives the invoice for your Sprint PCS Service), you can get a sub-account password at www.sprint.com.

Voicemail Password

You'll create your voicemail password (or passcode) when you set up your voicemail. See "Setting Up Your Voicemail" on page 170 for more information on your voicemail password.

Sprint PCS Vision or Sprint Power Vision Password

With your A920 by Samsung, you may elect to set up a Sprint PCS Vision or Sprint Power Vision Password. This optional password may be used to authorize purchase of Premium Services content and to protect personal information on multi-phone accounts.

For more information, or to change your passwords, sign on to www.sprint.com or call Sprint Customer Service at **1-888-211-4PCS (4727)**.

Getting Help

Visit www.sprint.com

You can go online to:

- Access your account information
- Check your minutes used (depending on your Sprint PCS Service Plan)
- View and pay your bill
- Make your life easier by enrolling in Sprint PCS Online Billing and Automatic Payment
- Purchase accessories
- Shop for the latest Sprint PCS Phones
- View available Sprint PCS Service Plans and options
- Learn more about Sprint Power Vision and other great products like Sprint PCS Picture Mail℠, games, ringers, screen savers, and more

Reaching Sprint Customer Service

You can reach Sprint Customer Service many different ways:

- Dial on your Sprint PCS Phone
- Sign on to your account at www.sprint.com
- Call us toll-free at **1-888-211-4727** (Consumer customers) or **1-888-788-4727** (Business customers)
- Write to us at Sprint Customer Service, P.O. Box 8077, London, KY 40742

Receiving Automated Invoicing Information

For your convenience, your phone gives you access to invoicing information on your Sprint PCS Account. This information includes balance due, payment received, invoicing cycle, and an estimate of the number of minutes used since your last invoicing cycle.

To access automated invoicing information:

- Press .

Note:	This service may not be available in all Affiliate areas.

Sprint PCS Directory Assistance

You have access to a variety of services and information through Sprint PCS Directory Assistance, including residential, business, and government listings; movie listings or show times; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint PCS Directory Assistance and you will be billed for airtime.

To call Sprint PCS Directory Assistance:

- Press .

Sprint Operator Services

Sprint PCS Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party.

To access Sprint Operator Services:

- Press .

For more information or to see the latest in products and services, visit us online at www.sprint.com.

Note:	Sprint Operator Services may not be available in all Affiliate areas.

Your Sprint PCS Phone

Your Sprint PCS Phone: The Basics

In This Section

- Front View of Your Phone
- Viewing the Display Screen
- Features of Your Sprint PCS Phone
- Turning Your Phone On and Off
- Using Your Phone's Battery and Charger
- Navigating Through Phone Menus
- Displaying Your Phone Number
- Making and Answering Calls
- Entering Text

Your Sprint PCS Phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your phone.

Front View of Your Phone

Key Functions

1. **Speaker** allows you to hear the other caller and the different ring tones or sounds offered by your phone.
2. **Display Screen** displays all the information needed to operate your phone, such as the call status, the contacts, the date and time, the signal and battery strength, etc.
3. **Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode. Keys can be reassigned to create customized shortcuts.
   - Press **Up** to access **Missed Events.**
   - Press **Down** to access **My Content**.
   - Press **Right** to launch **Music**.
   - Press **Left** to view your **Media Player**.
4. **Left Softkey** allows you to select softkey actions or menu items corresponding to the bottom left line on the display screen.
5. **OK /Menu Key** allows you to access the menu screen. It also allows you to accept choices when navigating through a menu.
6. **Talk Key** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
7. **Volume Key** allows you to adjust the ringer volume in standby mode (with the flip open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options. To mute the ringer during an incoming call, press the volume key up or down.
8. **Voicemail Key** allows you to press and hold to automatically dial your voicemail.

9. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations.
10. **Numeric Keypad** allows you to enter numbers, letters, and characters.
11. **Shift/Asterisk Key** enters the asterisk [*] character for calling features. In text entry mode, press to change the capitalization mode.
12. **Accessory Interface Connector** allows you to connect optional accessories, such as a USB cable.
13. **Power Interface Connector** connects the phone to the battery charger.
14. **Microphone** allows other callers to hear you clearly when you are speaking to them.
15. **Plus Code Dialing Key** automatically dials the international access code for the country in which you are located (for instance, 011 for international calls placed from the United States).
16. **Space/Pound Key** enters the pound [#] character for calling features. In text entry mode, press to enter a space.
17. **TransFLASH™ Memory Slot** allows you to insert a specialized memory card made especially for mobile phones. Your phone supports up to 512 MB of TransFLASH memory.
18. **Back Key (Clear)** deletes characters from the display in text entry mode. When in a menu, press the Back key to return to the previous menu. This key also allows you to return to the previous screen in a Sprint PCS Vision session.

19. **Voice Command/Speakerphone Key** allows you to say commands to perform common functions supported by your phone or turn the speakerphone on or off during a call. Press and release the inner key to initiate speakerphone mode.
20. **Camera Key** allows you to capture a picture when you are in camera mode.
21. **End Key (Power)** ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to enter silent mode and mute the ringer.
22. **Right Softkey** allows you to select softkey actions or menu items corresponding to the bottom right line on the display screen.

Viewing the Display Screen

Your phone's display screen provides a wealth of information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

Tip:	To view a list of your phone's icons and descriptions, from the main menu select **Settings > Phone Info > Icon Glossary**.

displays your current signal strength. The more lines you have, the stronger your signal.

means your phone cannot find a signal.

tells you a call is in progress.

indicates Sprint Power Vision status.

indicates Sprint Power Vision is available.

indicates Sprint Power Vision is dormant.

indicates Sprint Power Vision is active.

indicates that you have voicemail, text, numeric pages, picture messages, video messages, or Wireless Access Protocol (WAP) messages waiting. Press briefly to see a list of pending messages or press and hold to dial your voicemail box.

indicates that a device with Bluetooth technology is connected.

indicates that Bluetooth technology is enabled.

indicates that there is an unread message in your inbox.

indicates that the text message has been read.

indicates that there is an unread urgent message in your inbox.

indicates that you have read the urgent message.

indicates that the message was sent.

indicates that the message failed to send.

indicates that you have a pending message.

indicates that the message is a draft.

indicates that there is URL text contained in the text message.

indicates that your Sprint PCS Vision connection is active.

indicates that your Sprint PCS Vision connection is dormant or inactive.

indicates that you are receiving information.

indicates that you are sending information.

indicates that your phone is in vibrate all mode.

indicates that your phone is in ringer+vibrate mode.

indicates that the ringer is set at a level between 1 - 8 or that 1-Beep is selected.

indicates that the ringer is turned off.

indicates that your phone's ringer+vibrate is turned off.

shows your current battery charge strength.

(Icon shown fully charged and completely empty.)

indicates that position location is active.

indicates that position location is inactive.

indicates that the TTY option is on.

R

indicates that your phone is roaming.

indicates that your message is locked.

indicates that your phone is in Web security mode.

indicates that an alarm is set on your phone.

indicates that the camera is enabled.

indicates that the camcorder is enabled.

indicates that the self-timer function is enabled. With the self-timer enabled, a set amount of time is required prior to taking a picture.

indicates that the movie light is turned on when recording video clips.

indicates that the white balance has been set to Sunny. This is used for taking pictures or movies outdoors on bright sunny days.

indicates that the white balance has been set to Cloudy. This is used for taking pictures or movies outdoors under cloudy conditions.

indicates that the white balance has been set to Tungsten. This is used for taking pictures or movies indoors under normal lighting conditions.

indicates that the white balance has been set to Fluorescent. This is used for taking pictures or movies indoors under fluorescent lighting conditions.

indicates that the white balance has been set to Manual. This is used for taking pictures indoors or outdoors using your own custom settings.

allows you to start recording a video or voice memo.

indicates that a voice memo or video has been paused.

indicates that a voice memo or video is playing.

indicates that a picture has been assigned a function. An example may be Picture ID, Screen Saver, or Incoming Call.

indicates that media has been uploaded to an online album or folder.

indicates that there is a TransFLASH memory card installed.

indicates that there is a voice message attached to an image.

Note:	Display indicators help you manage your roaming charges by letting you know when you're off the Nationwide Sprint PCS Network and whether you're operating in digital mode. (For more information, see Section 2D: Controlling Your Roaming Experience on page 75.)

Features of Your Sprint PCS Phone

Congratulations on the purchase of your Sprint Power Vision Phone. The A920 by Samsung is lightweight, easy-to-use, and reliable, and it also offers many significant features and service options. The following list previews some of those features and provides page numbers where you can find out more:

- Digital dual-band capability allows you to make and receive calls while on the Nationwide Sprint PCS Network and to roam on other 1900 and 800 MHz digital networks where Sprint has implemented roaming agreements (page 75).
- Sprint PCS Vision[SM] provides access to the wireless Internet in digital mode (page 189).

- Sprint PCS Mail (page 197), SMS Text Messaging (page 179), and SMS Voice Messaging (page 182) provide quick and convenient messaging capabilities.
- Sprint PCS Voice Command℠ lets you dial phone numbers by speaking someone's name or the digits of their phone number (page 223).
- Games, ringers, screen savers, and other applications can be downloaded to make your Sprint PCS Phone as unique as you are (page 201). Additional charges may apply.
- The Contacts list allows you to store up to 500 entries, with up to five phone numbers per entry (page 87).
- The built-in Scheduler offers several personal information management features to help you manage your busy lifestyle (page 97).
- Your Sprint PCS Phone is equipped with a Location feature for use in connection with location-based services that may be available in the future (page 55).
- Your phone's external LCD display allows you to monitor the phone's status and to see who's calling without opening the phone.
- T9® Text Input lets you quickly type messages with one key press per letter (page 42).
- Speed dial lets you dial phone numbers with one or two key presses (page 40).

Turning Your Phone On and Off

Turning Your Phone On

To turn your phone on:

- Press and release .

Once your phone is on, it may display "Searching for Service," which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone's idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint PCS Service by pressing any key (when your phone is turned on).

Note:	The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone Off

To turn your phone off:

- Press and hold for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using Your Phone's Battery and Charger

Warning!	Use only Sprint-approved or manufacturer-approved batteries and chargers with your Sprint PCS Phone. The failure to use a Sprint-approved or manufacturer-approved battery and charger may increase the risk that your Sprint PCS Phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

Sprint- or manufacturer-approved batteries and accessories can be found at Sprint Stores or through your phone's manufacturer, or call 1-866-343-1114 to order. They're also available at www.sprint.com – click on the **Shopping** tab at the top, then look under **Phones & Accessories**.

Battery Capacity

Your Sprint PCS Phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 3.5 hours of continuous digital talk time.

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then powers down.

Note:	Long backlight settings, searching for service, vibrate mode, Bluetooth, and browser use affect the battery's talk and standby times.

Tip:	Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

To install the Li-Ion battery:

- To install, insert the battery into the opening on the back of the phone and gently press down until the latch snaps into place.

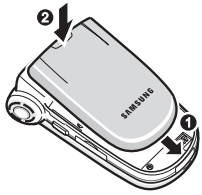

Removing the Battery

To remove your battery:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Press the battery release latch up and remove the battery from the phone at a 45-degree angle.

Charging the Battery

Your Sprint PCS Phone's Li-Ion battery is rechargeable and should be charged as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon( ) blinks and the phone sounds a warning tone.

Always use a Sprint-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

Warning!	Using the wrong battery charger could cause damage to your phone and void the warranty.

Using the Travel Charger

To use the travel charger provided with your phone:

- Plug the round end of the AC adapter into the phone's power interface connector and the other end into an electrical outlet.
  - A **red indicator light** on the phone lets you know the battery is charging.
  - An **on-screen indicator** lets you know that the battery is charged.

It takes about three hours to fully recharge a completely rundown battery.

Navigating Through Phone Menus

The navigation key on your Sprint PCS Phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through a menu, simply press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

For a diagram of your phone's menu, please see "Your Phone's Menu" on page iii.

Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing MENU OK.

For example, if you want to view your last incoming call:

1. Select **Menu** (MENU OK) to access the main menu.
2. Select **Call History** by pressing 2 ABC or by highlighting it and pressing MENU OK.
3. Select **Incoming Calls** by pressing 2 ABC or by highlighting it and pressing MENU OK. (If you have received any calls, they are displayed on the screen.)

Note:	For the purposes of this guide, the above steps condense into "Select **Menu > Call History > Incoming Calls**."

Backing Up Within a Menu

To go to the previous menu:

- Press .

To return to standby mode:

- Press .

Displaying Your Phone Number

Just in case you forget your phone number, your Sprint PCS Phone can remind you.

To display your phone number:

- Select **Menu** > **Settings** > **Phone Info** > **Phone Number**. (Your phone number and other information about your phone and account will be displayed.)

Note:	To select Menu, press the menu key. To select menu options (such as Settings, above), highlight the option and press OK. (If the menu options are numbered, you may also select an option simply by pressing the corresponding number key.)

Making and Answering Calls

Making Calls

Placing a call from your Sprint PCS Phone is as easy as making a call from any landline phone. Just enter the number and press , and you're on your way to clear calls.

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press to erase one digit at a time. Press and hold to erase the entire number.)
3. Press . (To make a call when you are roaming and Call Guard is enabled, press and then . See "Using Call Guard" on page 79.)
4. Press or close the phone when you are finished.

Tip:	To redial your previous call, press **TALK** twice.

You can also place calls from your Sprint PCS Phone by using Contacts menu (page 89), Sprint PCS Voice Command℠ (page 223), speed dialing numbers from your Contacts (page 40), using Voice Activated Dialing (page 108), and using your Call History listings (page 83).

Dialing Options

When you enter numbers in standby mode, select **Options** ( ) to see the following dialing options.

To initiate an option, press the corresponding softkey button.

- **Send Msg** allows you to send a text or voice SMS message with attachments to the number being dialed.
- **Dial** dials the number or digits displayed.
- **Save**: Enter a seven- or ten-digit number (phone number and area code) and press or **Options** ( ). Select **Save** to save the phone number. (See “Saving a Phone Number” on page 36.)
- **Find:** Enter a digit or string of digits and press **Options** (right softkey). Press **Search** to display Contacts entries that contain the entered numbers. (See “Finding a Phone Number” on page 37.)
- **Hard Pause** allows you to enter a hard pause. To continue dialing, you must press a key. (See “Dialing and Saving Phone Numbers With Pauses” on page 38.)
- **2sec Pause** allows you to enter a 2-second pause. The phone will pause, then continue dialing without any additional keys being pressed. (See “Dialing and Saving Phone Numbers With Pauses” on page 38.)

Answering Calls

To answer an incoming call:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any number key. See "Call Answer Mode" on page 62 for more information.)

Your Sprint PCS Phone notifies you of incoming calls in the following ways:

- The phone rings and/or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

If Call Answer is set to **Talk Key**, the following options are also displayed. To select an option, press the corresponding softkey button.

- **Answer** to answer the call.
- **Ignore** to send the call to your voicemail box.

Tip:	To quiet the ringer, press the back, end, or volume key.

Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Nationwide Sprint PCS Network. Please see Section 2D: Controlling Your Roaming Experience for more information about roaming.

To answer a call when you are roaming and Call Guard is enabled:

- Select **Answer** to answer the call. (See "Using Call Guard" on page 79 for additional information.)

Note:	When your phone is off, incoming calls go directly to voicemail.

Ending a Call

To disconnect a call when you are finished:

- Close the phone or press .

Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

To display the Missed Call entry from the notification screen:

- Highlight the entry and press . (To dial the phone number, press .)

To display a Missed Call entry from standby mode:

1. Select **Menu** > **Call History** > **Missed calls**.
2. Highlight the entry you wish to view and press .

Calling Emergency Numbers

You can place calls to 911 (dial and press), even if your phone is locked or your account is restricted.

Note:	When you place an emergency call, your phone automatically enters Emergency mode.

During an emergency call, press **Options** (right softkey) to display your options. To select an option, highlight it and press .

- **Unlock Phone** to unlock your phone (appears only if the phone is locked).
- **To close the pop-up menu** (appears only if the phone is unlocked), press the key.

Tip:	Press **Options** (right softkey), then phone info & phone number to display your phone number during an emergency call.

To exit Emergency mode:

1. Press to end a 911 call.
2. Press and hold until Emergency mode is exited.

In-Call Options

Pressing **Options** (right softkey) during a call displays a list of features you may use during the course of a call. To select an option, press the corresponding keypad number or highlight the option and press MENU OK. The following options are available through the Options menu:

Warning!	Due to higher volume levels, do not place the phone near your ear during speakerphone use.

- (1) **Key Mute** or **Key Unmute** allows you to mute the key tones on your phone so the other caller cannot hear you pressing any keys on your handset.
- (2) **Contacts** accesses the Contacts menu.
- (3) **Messaging** accesses the Messaging menu options.
- (4) **3-Way Call** allows you to talk to two different people at the same time. (For more information, see “Making a Three-Way Call” on page 186.)
- (5) **Call History** checks your call log for Outgoing, Incoming, Missed, and All Recent calls. You can also erase the logs from this menu.
- (6) **Voice Memo** allows you to record incoming audio from your conversation. (For more information, see “Managing Voice Memos” on page 119.)
- (7) **Tools** accesses the Tools menu options.
- (8) **Phone Info** displays the following menu:
  - (1) Phone Number
  - (2) Icon Glossary
  - (3) Version
  - (4) Advanced
  - (5) Memory Status

During a call, the left softkey button functions as the **Mute** button. Press it to mute the phone's microphone for privacy. Press it again to **Unmute** the phone.

End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your Contacts, the phone number and the duration of the call are displayed. The left softkey displays the **Save** option. Select this option if you wish to add the new number to your Contacts. (See "Saving a Phone Number" below.)

After receiving a call from or making a call to a phone number that is already in your Contacts, the entry name and phone number and the duration of the call are displayed. The right softkey displays the option **Call**.

Note:	The End-of-Call options are not displayed for calls identified as No ID or Restricted.

Saving a Phone Number

Your Sprint PCS Phone can store up to 5 phone numbers in each Contact entry up to a total of 500 phone numbers. Each entry's name can contain up to 20 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see Section 2F: Using Contacts on page 87.)

To save a number from standby mode:

1. Enter a phone number and press MENU OK.
2. Select **New Entry** or **Existing Entry** and press MENU OK.

Note:	The **New Entry** screen does not display for the first entry saved into the contacts. Skip to step 3 if you are entering the first number in the contacts.

Note:	If **Existing Entry** was selected, press **OK** to launch the **Find** screen. Locate the desired contact and add the additional number to the selected entry.

3. Use your navigation key to select a label **(Mobile**, **Home**, **Work**, **Pager**, or **Others)** and press MENU OK.
4. Enter a name for the entry using the numeric keys. Press to select the desired entry method **T9(English)**, **Alpha**, **Symbol**, or **Number**. (See “Entering Text” on page 41)
5. When finished entering the name, press MENU OK to return to the contact entry.
6. Press for **Done** to save the entry.

Finding a Phone Number

You can search Contacts entries for phone numbers that contain a specific string of numbers.

To find a phone number:

1. While in standby mode, enter three or more of the last digits of the phone number. (The more numbers you enter, the more specific the search becomes.)
2. Press **Options** (right softkey) and select **Find**. (All Contacts entries matching the entered numbers will be displayed.)
3. To display the Contacts entry that contains the phone number you entered, highlight the entry and press MENU OK.

   To dial the number, press .

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard Pause** sends the next set of numbers when you press the left softkey button.
- **2-Second Pause** automatically sends the next set of numbers after two seconds.

Note:	You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number.
2. Press **Options** (right softkey) and select either **Hard Pause** or **2 sec Pause**.
3. Enter additional numbers.
4. Press .
   – or –
   Press **Option** ( ) > **Save** to save the number in your Contacts.

Note	When dialing a number with a hard pause, press the **Talk** key to send the next set of numbers.

Plus (+) Code Dialing

When placing international calls, you can use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls placed from the United States).

To make a call using Plus Code Dialing:

1. Press and hold until a "**+**" appears on your phone display.
2. Dial the country code and phone number you're calling and press . (The access code for international dialing will automatically be dialed, followed by the country code and phone number.)

Dialing From the Contacts List

To dial directly from a Contacts entry:

1. Select **Menu** > **Contacts** > **Find**.

Shortcut:	Press **Contacts** (right softkey) to list entries.

2. Highlight the entry you want to call and press .
   – or –
   To dial another number from the entry, highlight the name and press , then highlight the number you wish to call and press .

Using Speed Dialing

You can store up to 98 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a button or two. With this feature, you can dial speed dial entries using one key press for locations 2-9 or two key presses for locations 10-99.

To use One-Touch Dialing for speed dial locations 2-9:

- Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows the name and number of the speed dial.

To use Two-Touch Dialing for speed dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that the number has been dialed when it shows the name and number of the speed dial.

Note:	When you are roaming off the Nationwide Sprint PCS Network, you must always dial using eleven digits (1 + area code + number).

Entering Text

Selecting a Character Input Mode

Your Sprint PCS Phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when using Sprint PCS Mail and SMS Text Messaging).

To change the character input mode:

1. When you display a screen where you can enter text, press the right softkey to change the character input mode.
2. Select one of the following options:
   - **T9(English)** to enter text using a predictive text entering system that reduces the number of keys that need to be pressed while entering a word (see page 42).
   - **Alpha** to cycle through the alpha characters associated with the letters on the keypad (see page 43).
   - **Symbol** to enter symbols (see page 44).
   - **Number** to enter numbers by pressing the numbers on the keypad (see page 44).
   - **Preset Msg** to enter preprogrammed messages (see page 44).
   - **Recent Msg** to enter a message from a list of previous messages.
   - **Emoticons** to enter "emoticons" (see page 44).

Tip:	When entering text, press the * (Shift) key to change letter capitalization (**ABC > Abc > abc**).

Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your Sprint PCS Phone by pressing keys just once per letter. (To select the **T9 Word** mode when entering text, see "Selecting a Character Input Mode" on page 41.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.)

To enter a word using T9(English) Text Input:

1. Select the **T9(English)** character input mode. (See "Selecting a Character Input Mode" on page 41.)
2. Press the corresponding keys once per letter to enter a word (for example, to enter the word "Bill," press). (If you make a mistake, press to erase a single character. Press and hold to delete an entire entry.)

If the word you want does not display after you have entered all the letters, press to scroll through additional word selections. To accept a word and insert a space, press .

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad:

1. Select the **Abc** mode (See "Selecting a Character Input Mode" on page 41).
2. Press the corresponding keys repeatedly until the desired letter appears (for example, to enter the word "Bill," press 2 ABC twice, 4 GHI three times, 5 JKL three times, and 5 JKL three times again). (If you make a mistake, press BACK to erase a single character. Press and hold BACK to delete an entire entry.)

By default, the first letter of an entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

1	. , @ 1 ? ! * # /	8 TUV	T U V 8
2 ABC	A B C 2	9 WXYZ	W X Y Z 9
3 DEF	D E F 3	0 Next	0
4 GHI	G H I 4	# Space	Space
5 JKL	J K L 5	* Shift	Shift
6 MNO	M N O 6		
7 PQRS	P Q R S 7		

Entering Numbers, Symbols, Smileys and Preset Messages

To enter numbers:

- Select the **Number** mode and press the appropriate key. (See "Selecting a Character Input Mode" on page 41.)

To enter symbols:

- Select the **Symbols** mode. (See "Selecting a Character Input Mode" on page 41.) To enter a symbol, press the appropriate key indicated on the display.

To enter "emoticons" (smileys):

- Select the **Emoticons** mode and press the appropriate key. (See "Selecting a Character Input Mode" on page 41.)

To enter preset messages:

1. Select the **Preset Msg** mode. (See "Selecting a Character Input Mode" on page 41.)
2. Scroll to the desired preprogrammed message and press MENU OK.

Note:	Preset messages make composing text messages even easier by allowing you to enter preset messages, such as "Meet me at," "Let's get lunch," or a customized preset message of your own. (For more information on preset messages, please see "**Managing Preset Messages**" on page 58.)

Controlling Your Phone's Settings

In This Section

- Sound Settings
- Display Settings
- Location Settings
- Messaging Settings
- Airplane Mode
- TTY Use With Sprint PCS Service
- Phone Setup Options
- Call Setup Options

Using the menu options available on your Sprint PCS Phone, you can customize your phone to sound, look, and operate just the way you want it to. This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

Sound Settings

Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

- **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- **Vibrating Ringer** alerts you to calls or messages without disturbing others.
- **Downloaded Ringers** can be downloaded right to your phone. (See "Downloading Premium Services Content" on page 201.)

Selecting Ringer Types for Voice Calls

Your Sprint PCS Phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

To select a ringer type for voice calls:

1. Select **Menu** > **Settings** > **Sounds** > **Ringer Type** > **Voice Calls**.
2. Select **With Caller ID** or **No Caller ID**.
3. Select **Single Tones**, **Ring Tones**, **Melodies**, or **My Content**. and press MENU OK. (The list of ringers or videos is displayed.)
4. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
5. Press MENU OK.

Selecting Ringer Types for Messaging

To select a ringer type for messages:

1. Select **Menu** > **Settings** > **Sounds** > **Ringer Type** > **Messaging**.
2. Select **Voicemail**, **Text Message**, or **Picture Mail**.
3. Select **Single Tones**, **Ring Tones**, **Melodies**, or **My Content** and press MENU OK. (The list of preprogrammed ringers is displayed.)
4. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
5. Press MENU OK to assign the desired ringer.

Selecting a Key Tone

Your phone offers a number of options for selecting the audible tones accompanying a key press. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)

To select a key tone:

1. Select **Menu** > **Settings** > **Sounds** > **Key Tone**.
2. Select **Tone Type** and press MENU OK.
3. Select **DTMF**, **Rain Drop**, or **Voice** and press MENU OK.

Key Tone Level

Your phone allows you to set the desired volume level of the key tones.

To set the key tone level:

1. Select **Menu** > **Settings** > **Sounds**> **Key Tone**.
2. Select **Tone Level** and press MENU OK.
3. Press up or down until you hear the desired tone level and press MENU OK.

Key Tone Length

The key tone length allows you to choose between short or long tones when pressing a key. Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.

To set the key tone length:

1. Select **Menu** > **Settings** > **Sounds** > **Key Tone** > **Tone Length**.
2. Select **Short** or **Long** and press MENU OK.

Adjusting the Phone's Volume Settings

You can adjust your phone's volume settings to suit your needs and your environment.

To adjust your phone's volume settings:

1. Select **Menu** > **Settings** > **Sounds** > **Volume**.
2. Select **Ringer**, **Text Message**, **Picture Mail**, **Voice Mail**, **Alarms**, or **App. Volume**.
3. Using the navigation key, select **Separate Volume**. (Select **Always Vibrate** to make the ringer vibrate at any volume level.)

Note:	**Separate Volume** is not available for **Ringer** volume.

4. Use the navigation key to choose a volume level and select **Done** ( ).

Tip:	You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume key on the right side of your phone.

Alert Notification

Your Sprint PCS Phone can alert you with an audible tone when you change service areas, once a minute during a voice call, when the signal fades, when powering your phone on or off, or when a call has been connected.

To enable or disable alert sounds:

1. Select **Menu** > **Settings** > **Sounds** > **Alerts**.
2. Select **Minute Beep**, **Service**, **Connect**, **Sig. Fade Tone**, or **Power On/Off** and press MENU OK.
3. Select **On** or **Off** and press MENU OK.

Silence All

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

- With the phone open, press and hold the volume key down in standby mode. (The screen will display "Silence All.")

To deactivate Silence All:

- Press the volume key up repeatedly to select a desired volume level.

Display Settings

Changing the Text Greeting

The text greeting can be up to 14 characters and is displayed on your phone's screen in standby mode. You may choose to keep the phone's default greeting ("Sprint"), or you may enter your own custom greeting.

To display or change your greeting:

1. Select **Menu** > **Settings** > **Display** > **Greeting** > **Custom**.
2. Enter a custom greeting using your keypad and press MENU OK. (See "Entering Text" on page 41.) (To erase the existing greeting one character at a time, press BACK. To erase the entire greeting, press and hold BACK.)

Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any key press is made.

To change the backlight setting:

1. Select **Menu** > **Settings** > **Display** > **Backlight** > **Main Display**.
2. Select a time setting and press MENU OK.

To change the keypad setting:

1. Select **Menu** > **Settings** > **Display** > **Backlight** > **Keypad**.
2. Select a time setting and press MENU OK.

Note:	Long backlight settings affect the battery's talk and standby times.

Changing the Display Screen

Your new Sprint PCS Phone offers options for what you see on the display screen when in standby mode.

To change the display images on main LCD:

1. Select **Menu** > **Settings** > **Display** > **Screen Saver**.
2. Select **Main LCD**.
3. Select **Preset Images**, **My Content**, or **My Albums** and press MENU OK.
4. Choose the desired image and press MENU OK to assign.

To change the display images on Sub LCD:

1. Select **Menu** > **Settings** > **Display** > **Screen Saver**.
2. Select **Sub LCD**.
3. Select **Preset Images**, **My Content**, or **Main LCD Pic** and press MENU OK.
4. Choose the desired image and press MENU OK to assign.

Changing the Brightness

You can adjust your screen's brightness to suit your surroundings.

To adjust the display's contrast:

1. Select **Menu** > **Settings** > **Display** > **Backlight** > **Brightness**.
2. Press your navigation key up or down to adjust the brightness and press MENU OK.

Changing the Phone's Menu Style

Your Sprint PCS Phone allows you to choose how the menu appears on your display screen.

To select the display's menu style:

1. Select **Menu** > **Options** > **Menu Style**.
2. Select **3x4 Style** to view each main menu item as an animated, single screen icon or **List Style** to view the main menu as a list and press MENU OK.

Changing the Font Color

You can customize your phone's display font by selecting a color scheme or style to reflect your personality.

To change the display's theme color:

1. Select **Menu** > **Settings** > **Display** > **Dialing Font** > **Color**.
2. Select **Basic**, **Rainbow**, **Monochrome**, or **Hyphenate** and press MENU OK.

Changing the Dialing Font

This setting allows you to adjust the display appearance when dialing phone numbers.

To change the dialing font:

1. Select **Menu** > **Settings** > **Display** > **Dialing Font**.
2. Select **Size**.
3. Select **Large**, **Medium**, or **Small** and press MENU OK.

Changing the Foreground

Select the desired clock, calendar or scheduler to be displayed on the phone's idle screen by selecting one of the preset foreground options.

To change the appearance on the standby screen:

1. Select **Menu** > **Settings** > **Display** > **Set Foreground**.
2. Select **Digital Clock**, **Calendar**, or **Others** and press MENU OK.
3. Press the navigation key left or right to display the available screen locations.
4. Press **Assign** ( ) to apply the foreground setting.

Location Settings

Your Sprint PCS Phone is equipped with a Location feature for use in connection with location-based services that may be available in the future.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note:	Turning Location on will allow the network to detect your position using GPS technology, making some Sprint PCS applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your phone's Location feature:

1. Select **Menu** > **Settings** > **Others** > **Location**. (The Location disclaimer is displayed.)
2. Read the disclaimer and press MENU OK.
3. Select **On** or **Off** press MENU OK.

When the Location feature is on, your phone's standby screen will display the icon. When Location is turned off, the icon will be displayed.

Messaging Settings

Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of text messages without placing a voice call. (For more information, see "Accessing Messaging" on page 197.)

Your phone's messaging settings make text messaging even faster and easier by letting you decide how you would like to be notified of new messages, create a signature with each sent message, and create your own canned messages, to name just a few.

Setting Message Alerts

When new messages arrive, you can choose to have your phone notify you by playing an audible alert.

To hear an alert when you receive a new message:

1. Select **Menu** > **Messaging** > **Settings** > **General** > **Message Alert**.
2. Select **Volume**, **Type**, or **Reminder** and press MENU OK.
3. Select the desired options and press MENU OK.

Deleting Old Messages

You can delete messages that you've already read whenever you like, or you can have your phone delete them automatically for you when your phone's message memory becomes full.

To automatically delete read messages:

1. Select **Menu** > **Messaging** > **Settings** > **General** > **Auto-Erase**.
2. Select **Yes** or **No** and press MENU OK.

Adding a Customized Signature

Each message you send can have a customized signature to reflect your personality.

To add a customized signature to each sent message:

1. Select **Menu** > **Messaging** > **Settings** > **General** > **Edit Signature**.
2. Select **On** and press MENU OK. (If you do not wish to attach a signature to your outgoing messages, select **Off** and press MENU OK.)
3. Enter your signature and press MENU OK. (See "Entering Text" on page 41.)

Managing Preset Messages

Your phone is programmed with ten preset messages to help make sending text messages faster and easier. These messages, such as "Where are you?," "Let's get lunch," and "Meet me at," can be customized or deleted to suit your needs. You can even add your own preset messages to the list (up to 20 messages total).

To edit or delete a preset message:

1. Select **Menu** > **Messaging** > **Settings** > **General** > **Preset Messages**. (The list of preset messages is displayed.)
2. To edit or delete a preset message, highlight it and press **Edit** ( ) (see "Entering Text" on page 41).

   – or –

   Select **Options (** **)**, then select **Erase** to delete the selected message. Select **Yes** to confirm. (Select **No** to cancel the deletion.)

To add a new preset message:

1. Select **Menu** > **Messaging** > **Settings** > **General** > **Preset Messages**. (The list of preset messages is displayed.)
2. To add a new message, select the desired message location, press **Options** ( ) and select **Add New**.
3. Enter your message (see "Entering Text" on page 41), and press . (Your new message will be added to the beginning of the list.)

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, Music, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

To set your phone to Airplane Mode:

1. Select **Menu** > **Settings** > **Others** > **Airplane Mode**.
2. Read the disclaimer and press MENU OK.
3. Select **On**, **Off** or **On Power Up** and press MENU OK.

While in Airplane Mode, your phone's standby screen will display "Phone off."

TTY Use With Sprint PCS Service

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your Sprint PCS Service, please call Sprint Customer Service via the state Telecommunications Relay Service (TRS) by first dialing . Then provide the state TRS with this number: 866-727-4889.

To turn TTY Mode on or off:

1. Press **Menu** > **Settings** > **Others** > **TTY Mode** from standby mode. (An informational message is displayed.)
2. Press MENU OK.
3. Select **TTY Full**, **TTY+Hear**, **TTY+Talk**, or **TTY Off** and press MENU OK.

Note:	In TTY Mode, your phone will display the TTY access icon when a headset or TTY device is plugged in. **If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.**

WARNING	**911 Emergency Calling** Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and PSAP community are currently working to resolve this.

Updating Phone Software

The update phone software option allows you to download and update the software in your phone automatically. Only the internal software is updated, no contact entries or other information saved to your phone will be deleted.

To update your phone:

1. Press **Menu** > **Settings** > **Others** > **Update Phone Software** from standby mode.
2. Follow the onscreen instructions.

Phone Setup Options

Favorites

Your phone offers the option of assigning favorite or often-used functions. Selecting **Favorites** (left softkey) in standby mode will launch your personal favorite list.

To assign your shortcut key:

1. Select **Favorites** ( ).
2. Select the desired location and select **Add** or **Replace** ( ).
3. Press the navigation key up or down to highlight the desired function and press MENU OK.

Call Answer Mode

You can determine how to answer incoming calls on your phone, whether you want to be required to press , to press any number key, or simply to open the phone.

To set call answer mode:

1. Select **Menu > Settings > Others > Call Setup > Call Answer**.
2. To select an option, highlight it and press .
   - **Any Key** to allow an incoming call to be answered by opening the phone or pressing any key.
   - **Talk Key** to require to be pressed to answer all incoming calls.
   - **Flip Open** to answer the call when the flip is opened.

Auto Answer Mode

You may set your phone to automatically pick up incoming calls when connected to an optional hands-free car kit.

To set Auto Answer mode:

1. Select **Menu** > **Settings** > **Others** > **Call Setup** > **Auto Answer**.
2. To select an option, highlight it and press .
   - **Car-Kit/Headset** select **Yes** to answer calls automatically when the phone is connected to a hands-free car kit or a headset (sold separately). Remember, your phone will answer calls in Auto Answer mode even if you are not present.

Display Language

You can choose to display your Sprint PCS Phone's onscreen menus in English or in Spanish.

To assign a language for the phone's display:

1. Select **Menu** > **Settings** > **Others** > **Language**.
2. Select **English** or **Español** and press MENU OK.

Call Setup Options

Call Setup options allow you to set up the following options:

- **Abbreviated Dialing** allows you to program a five- or six-digit prefix for commonly used phone numbers.
- **Contacts Match** allows you to turn on or off the contacts matching feature.
- **Restriction** allows you to restrict outgoing calls.
- **Call Answer** allows you to set up how you answer incoming calls.
- **Auto Answer** allows you to answer incoming calls automatically with the optional hands-free car kit.

Abbreviated Dialing

Abbreviated dialing allows you to program a five- or six-digit prefix for commonly used phone numbers. When abbreviated dialing is on, you can enter the last four or five digits of any phone number that matches the five- or six-digit prefix, and the number is dialed.

To set up abbreviated dialing:

1. **Select Menu > Settings > Others > Call Setup > Abbrev. Dial.**
2. Select **On** or **Off** and press MENU OK.
3. Input the five- or six-digit prefix (for example, area code and prefix) and press MENU OK.

Making an Abbreviated Dial Call

To make a call:

1. Enter the last four or five digits of the prefix phone number.
2. Abbrev. Dial is displayed in the lower left corner with the prefix digits displayed.

Note:	If there is more than one Contact entry that matches the last four or five digits, a list is displayed which allows you to select the desired number to call.

3. Press TALK to make the call.

Contacts Match

With the Contacts match feature, your phone displays the Contact's name and phone number if the incoming call or outgoing call is in your Contacts list.

To access Contacts match:

1. Select **Menu > Settings > Others > Call Setup > Contacts Match**.
2. Select **On** or **Off** and press MENU OK.

Restriction

Allows you to restrict outgoing call options by selecting one of the following options:

- **Allow all** to allow outgoing calls to be made (no restrictions).
- **Contacts Only** to allow outgoing calls to only those numbers saved in the contacts.
- **Special# Only** to allow outgoing calls to only the numbers set up in the special numbers list. (See "Using Special Numbers" on page 71.)

To access call restriction:

1. Select **Menu > Settings > Others > Call Setup > Restriction**.
2. Enter your lock code.
3. Select **Outgoing Call** and press MENU OK.
4. Select **Allow All**, **Contacts Only**, or **Special# Only** and press MENU OK.

Setting Your Phone's Security

In This Section

- Accessing the Security Menu
- Using Your Phone's Lock Feature
- Using Special Numbers
- Erasing Contacts
- Erasing My Content
- Resetting Your Phone
- Security Features for Sprint PCS Vision

By using the security settings on your Sprint PCS Phone, you receive peace of mind without sacrificing flexibility. This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

To access the Security menu:

1. Select **Menu** > **Settings** > **Security**.
2. Enter your lock code to display the Security menu.

Tip:	If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone number or try 0000 or NATL (6285). If none of these work, call Sprint Customer Service at 1-888-211-4PCS (4727).

Using Your Phone's Lock Feature

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint Customer Service, or special numbers. (See "Using Special Numbers" on page 71.)

To lock your phone:

1. From the Security menu, select **Lock Phone**.
2. Highlight **Lock Now** and press MENU OK. (To set your phone to lock the next time it is turned on, select **On Power-Up** and press MENU OK.)

Unlocking Your Phone

To unlock your phone:

1. From standby mode, press , , , or .
2. Enter your lock code.

Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 71.)

To place an outgoing call in lock mode:

- To call an emergency number, special number, or Sprint Customer Service, enter the phone number and press .

Locking Pic/Video

When your pictures and videos are locked, it prevents anyone from accessing the Pic/Video menu without first having to enter a security code.

To lock the pic/video menu:

1. Select **Menu** > **Settings** > **Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Lock Pic/Video** and press .
4. Select **On** and press .

Changing the Lock Code

To change your lock code:

1. Select **Menu** > **Settings** > **Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Change Lock**.
4. Enter your new lock code and press MENU OK.
5. Re-enter your new lock code and press MENU OK.

Lock Service

This setting allows you to lock voice call functions and Sprint PCS Vision/Sprint Power Vision services. When you enable Lock Services, you will be unable to make new calls (excluding emergency numbers) or to access the Vision services until the lock has been disabled in the Security menu.

Locking Voice Services

1. Select **Menu** > **Settings** > **Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Lock Services** and press MENU OK.
4. Select **Voice** and press MENU OK.
5. Select **Lock** and press MENU OK.

Locking Sprint Power Vision

1. Select **Menu** > **Settings** > **Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Lock Services** and press MENU OK.
4. Select **Power Vision** and press MENU OK.
5. Select **Lock** and press MENU OK.

Using Special Numbers

Special numbers are important numbers that you have designated as being "always available." You can call and receive calls from special numbers even if your phone is locked.

You can save up to ten special numbers in addition to your Contacts entries (the same number may be in both directories).

To add or replace a special number:

1. Select **Menu** > **Settings** > **Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Special #**.
4. Select a location for your entry and press MENU OK.
5. Enter the number and press MENU OK.

Note:	There are no speed dial options associated with special numbers.

Erasing Contacts

You can quickly and easily erase all the contents of your Contacts list.

To erase all the names and numbers in your Contacts:

1. Select **Menu** > **Settings** > **Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Erase Contacts** and press MENU OK.
4. If you are certain you would like to erase all of your Contacts entries, select **Yes** and press MENU OK.

Erasing My Content

You can use your phone's security menu to erase all items you have downloaded to your phone.

To erase my content:

1. Select **Menu** > **Settings** > **Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Erase My Content** and press MENU OK.
4. If you are certain that you would like to erase all items downloaded to your phone, select **Yes** and press MENU OK.

Erasing Pic/Video

You can use your phone's security menu to erase all pictures and videos stored in your phone.

Note:	This process will erase all pictures/videos stored in the phone. None of the pictures or videos saved on the memory card will be erased.

To erase all pictures and videos:

1. Select **Menu** > **Settings** > **Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Erase Pic/Video** and press MENU OK.
4. If you are certain that you would like to erase all pictures and videos stored in your phone, select **Yes** and press MENU OK.

Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings (contacts are not affected when resetting your phone).

To reset your phone:

1. Select **Menu** > **Settings** > **Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Reset Phone** and press MENU OK.
4. If you are certain that you would like to restore all of the factory settings, select **Yes** and press MENU OK.

Security Features for Sprint PCS Vision℠

Enabling and Disabling Sprint PCS Vision Services

You can disable Sprint PCS Vision services, including Sprint Power Vision, without turning off your phone; however, you will not have access to all Sprint PCS Vision and Sprint Power Vision services, including Web and messaging. Disabling Sprint PCS Vision will avoid any charges associated with Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may enable Sprint PCS Vision services again at any time.

To disable Sprint PCS Vision services:

- Select **Menu** > **Settings** > **Power Vision** > **Disable Vision**. (A message will appear.)

To enable Sprint PCS Vision services:

- Select **Menu** > **Settings** > **Power Vision** > **Enable Vision**. (A message will appear.)

Note:	Enabling or disabling Sprint PCS Vision services will have the same effect on Sprint Power Vision services in areas with high-speed data coverage.

Controlling Your Roaming Experience

In This Section

- Understanding Roaming
- Setting Your Phone's Roam Mode
- Controlling Roaming Charges Using Call Guard

Roaming is the ability to make or receive calls when you're off the Nationwide Sprint PCS Network. Your new digital dual-band A920 by Samsung® works anywhere on the Nationwide Sprint PCS Network and allows you to roam on other 1900 and 800 MHz digital networks where we've implemented roaming agreements with other carriers.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding Roaming

Recognizing the Roaming Icon on the Display Screen

Your phone's display screen always lets you know when you're off the Nationwide Sprint PCS Network. Any time you are roaming, the phone displays the roaming icon (R).

Tip:	Remember, when you are using your phone off the Nationwide Sprint PCS Network, always dial numbers using 11 digits (1 + area code + number).

Note:	Unless your Sprint PCS Service Plan includes roaming, you will pay a higher per-minute rate for roaming calls.

Roaming on Other Digital Networks

When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the Nationwide Sprint PCS Network. However, you may not be able to access certain features, such as Sprint PCS Vision or Sprint Power Vision.

Note:	If you're on a call when you leave the Nationwide Sprint PCS Network and enter an area where roaming is available, your call is dropped. If your call is dropped in an area where you think Sprint PCS Service is available, turn your phone off and on again to reconnect to the Nationwide Sprint PCS Network.

Checking for Voicemail Messages While Roaming

When you are roaming off the Nationwide Sprint PCS Network, you will not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended time.

To check your voicemail while roaming:

1. Dial 1 + area code + your Sprint PCS Phone number.
2. When you hear your voicemail greeting, press .
3. Enter your passcode at the prompt and follow the voice prompts.

When you return to the Nationwide Sprint PCS Network, voicemail notification will resume as normal.

Setting Your Phone's Roam Mode

Your Sprint PCS Phone allows you to control your roaming capabilities. By using the **Roaming** menu option, you can determine which signals your phone accepts.

Set Mode

Choose from three different settings on your digital dual-band phone to control your roaming experience.

To set your phone's roam mode:

1. Select **Menu** > **Settings** > **Roaming** > **Set Mode**.
2. To select an option, highlight it and press MENU OK.
   - **Automatic** seeks Sprint PCS Service. When Sprint PCS Service is unavailable, the phone searches for an alternate system.
   - **Roaming Only** forces the phone to seek a roaming system. The previous setting (Sprint Only or Automatic) is restored the next time the phone is turned on.
   - **Sprint** allows you to access the Nationwide Sprint PCS Network only and prevents roaming on other networks.

Using Call Guard

Your phone has two ways of alerting you when you are roaming off the Nationwide Sprint PCS Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming charges by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the Nationwide Sprint PCS Network.)

To turn Call Guard on or off:

1. Select **Menu** > **Settings** > **Roaming** > **Call Guard**.
2. Highlight **On** or **Off** and press MENU OK.

Note:	Voice dialing and speed dialing are not available when you are roaming with Call Guard enabled.

To place roaming calls with Call Guard on:

1. From standby mode, dial 1 + area code + the seven-digit number and press TALK.
2. Select **Roam Call** (1).

To answer incoming roaming calls with Call Guard on:

1. Press TALK.
2. Select **Answer** (1).

Note:	If the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls.

Managing Call History

In This Section

- Viewing History
- Call History Options
- Making a Call From Call History
- Saving a Phone Number From Call History
- Prepending a Phone Number From Call History
- Erasing Call History

The Call History keeps track of incoming calls, calls made from your Sprint PCS Phone, and missed calls. This section guides you through accessing and making the most of your Call History.

Viewing History

You'll find the Call History feature very helpful. It is a list of the last 20 phone numbers (or Contacts entries) for calls you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). Duplicate calls (same number and type of call) may only appear once on the list.

To view a Call History entry:

1. Select **Menu** > **Call History**.
2. Select **Outgoing Calls**, **Incoming Calls**, **Missed Calls**, or **Recent Calls**. and press MENU OK.
3. Highlight the entry you wish to view and press MENU OK.

Call History Options

For additional information and options on a particular call, highlight a Call History entry and press MENU OK. This feature displays the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts). By pressing **Options** (), you can select from the following options:

- **Send Msg** to send a Text, Picture Mail, Hand. Msg, or VoiceSMS.

- **Save** to save the number if it is not already in your Contacts. (See “Saving a Phone Number From Call History” on page 84.)
- **Prepend** to add numbers to the beginning of the selected number. (See “Prepending a Phone Number From Call History” on page 85.)
- **Erase** to delete the entry.

Tip:	You can also view the next Call History entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

Making a Call From Call History

To place a call from Call History:

1. Select **Menu** > **Call History**.
2. Select **Outgoing Calls**, **Incoming Calls**, **Missed Calls**, or **Recent Calls**. and press MENU OK.
3. Use your navigation key to select a Call History entry and press TALK.

Note:	You cannot make calls from Call History to entries identified as **No Caller ID, Unknown,** or **Restricted**.

Saving a Phone Number From Call History

Contacts entries can store up to a total of five phone numbers, and each entry's name can contain twenty characters.

To save a phone number from Call History:

1. Select **Outgoing Calls**, **Incoming Calls**, **Missed Calls**, or **Recent Calls** and press MENU OK.
2. Use your navigation key to select the desired entry and select **Options** ( ).
3. Select **Save** and press MENU OK.
4. Select **New Entry** and press MENU OK.
5. Select a label and press MENU OK.
6. Enter a name for the entry using the keypad and press MENU OK.
7. Select **Done** ( ) to save and exit.

After you have saved the number, the new Contacts entry is displayed. (See "Contacts Entry Options" on page 91.)

Note:	You cannot save phone numbers already in your Contacts or from calls identified as **No Caller ID, Unknown,** or **Restricted**.

Prepending a Phone Number From Call History

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by prepending the number.

To prepend a phone number from Call History:

1. Select a Call History entry, select the number or the name and press MENU OK.
2. Press **Options** ( ) and select **Prepend**.
3. Enter the prefix and press .

Erasing Call History

To erase individual Call History entries, see “Call History Options” on page 82.

To erase Call History:

1. Select **Menu** > **Call History**.
2. Select **Outgoing Calls**, **Incoming Calls**, **Missed calls**, or **Recent Calls** and press MENU OK.
3. Press **Options** ( ) and select **Erase** for the highlighted entry or **Erase All** for all entries and press MENU OK.

Using Contacts

In This Section

- Adding a New Contacts Entry
- Finding Contacts Entries
- Contacts Entry Options
- Adding a Phone Number to a Contacts Entry
- Editing a Contacts Entry's Phone Number
- Assigning Speed Dial Numbers
- Editing a Contacts Entry
- Selecting a Ringer Type for an Entry
- Dialing Sprint PCS Services

Now that you know the basics that make it easier to stay in touch with people and information, you're ready to explore your phone's more advanced features. This section explains how to use your phone's Contacts and helps you make the most of your contacts and time when you are trying to connect with the important people in your life.

Adding a New Contacts Entry

Your phone's contacts list can store up to 500 entries. Contacts entries can store up to a total of five phone numbers, and each entry's name can contain twenty characters.

To add a new entry:

1. Select **Menu** > **Contacts** > **Add New Entry**.

Shortcut:	Enter the phone number in standby mode and press **OK**. Proceed with steps 2-5.

2. Enter a name for the new entry and press the navigation key down. (See "Entering Text" on page 41.)
3. Enter the phone number for the entry and press MENU OK.
4. Select a label for the entry (**Mobile**, **Home**, **Work**, **Pager**, or **Others**) and press MENU OK.
5. Select **Done** ( ).

After you have saved the number, the Find screen is displayed. (See "Finding Contacts Entries" on page 89.)

Finding Contacts Entries

There are several ways to display your Contacts entries: by name, by speed dial number, by group, and by voice dial tags. Follow the steps outlined in the sections below to display entries from the Contacts menu.

Finding Names

To find Contacts entries by name:

1. Select **Menu** > **Contacts** > **Find**.
2. Scroll through all the entries using your navigation key.

   – or –
3. Enter the first letter of a name or part of a name (such as “ave” for “Dave”). (The more letters you enter, the more your search narrows.)
4. To display an entry, highlight it and press

.
5. To dial the entry’s default phone number, press

.

   – or –

   To display additional Contacts entries, press the navigation key left or right.

Shortcut:	From standby mode, press **Contacts** (right softkey) to display the Contacts menu.

Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:

1. Select **Menu** > **Contacts** > **Speed Dial #s**.
2. Scroll through speed dial entries using your navigation key. Speed dial numbers are displayed in numeric order.

   – or –

   Enter the number of a speed dial location using your keypad.
3. To display an entry, highlight it and press MENU OK.
4. To dial the entry's default phone number, press TALK.

Finding Group Entries

To find entries designated as part of a group:

1. Select **Menu** > **Contacts** > **Group**.
2. Scroll through the group titles using your navigation key. To display entries belonging to a group, highlight the group and press MENU OK.
3. To dial the entry's default phone number, press TALK.

Contacts Entry Options

To access a Contacts entry's options, highlight the entry and press **Options** ( ) > **Edit**. Highlight one of the options listed below and press .

- **[Add Photo]** to add a photo to the entry.
- **[Contact Name]** to edit the contact entry name.
- **[Add number]** to add a phone number to the entry. (See "Adding a Phone Number to a Contacts Entry" on page 92.)
- **[E-mail]** to add an email address to the entry.
- **[URL]** to add a Web site's URL to the entry.
- **[Nickname]** to add a nickname to the entry.
- **[Memo]** to add a note, street address, or other information.
- **[Group]** to assign the entry to a group.
- **[Ring]** to assign a preprogrammed or downloaded ringer.

Tip:	You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

Adding a Phone Number to a Contacts Entry

To add a phone number to an entry:

1. Display a Contacts entry (see “Finding Contacts Entries” on page 89) and press MENU OK.
2. Press **Edit** ( ).
3. Highlight **[Add Number]**, enter the new phone number, and press MENU OK.
4. Select a label for the number and press MENU OK.
5. Press **Done** ( ) to save the new number.

Editing a Contacts Entry’s Phone Number

To edit an entry’s phone number:

1. Display a Contacts entry (see page 89) and press MENU OK.
2. Press **Edit** ( ).
3. Highlight the number you wish to edit and press MENU OK.
4. Press BACK to clear one digit at a time, or press and hold BACK to erase the whole number.
5. Re-enter or edit the number and press MENU OK.
6. Select a label for the number and press MENU OK.
7. Press **Done** ( ) to save the number.

Assigning Speed Dial Numbers

Your phone can store up to 99 phone numbers in speed dial locations. For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 40.

Speed dial numbers can be assigned when you add a new Contacts entry, when you add a new phone number to an existing entry, or when you edit an existing number.

To assign a speed dial number to a new or existing phone number:

1. Add a phone number to a new or an existing Contacts entry. (See “Adding a New Contacts Entry” on page 88 or “Adding a Phone Number to a Contacts Entry” on page 92.)
2. Highlight the number and press **Options** ( ).
3. Select **Speed Dial** and press MENU OK.
4. Select an available speed dial location and press MENU OK.
5. Press **Done** ( ) to return to the Contacts menu.

Note:	If you attempt to assign an already in-use speed dial location to a new phone number, a dialog will appear asking if you wish to replace the existing speed dial assignment. Select Yes to assign the location to the new phone number and delete the previous speed dial assignment.

Editing a Contacts Entry

To make changes to an entry:

1. Display a Contacts entry.
2. Press **Edit** ( ).
3. Highlight the part of the entry you wish to edit (**Name**, **Group**, **Ringer**, etc.) and press MENU OK.
4. Add and/or edit the desired information and press MENU OK.
5. Press **Done** ( ) to save your changes.

Selecting a Ringer Type for an Entry

You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 46.)

To select a ringer type for an entry:

1. Display a Contacts entry.
2. Press **Edit** ( ).
3. Highlight the current ring type and press MENU OK.
4. Select the desired ringer category and press MENU OK.
5. Use your navigation key to scroll through available ringers. (When you highlight a ringer type, a sample ringer will sound.)
6. Highlight your desired ringer and press MENU OK.
7. Press **Done** ( ) to save the new ringer type.

Dialing Sprint PCS Services

Your Contacts list is preprogrammed with contact numbers for various Sprint PCS Services.

To dial a service from your Contacts:

1. Select **Menu** > **Contacts** > **Services**.
2. Select **Account Info**, **Customer Service**, or **Dir Assist**.
3. Press to place the call.

To dial a service from standby mode using your keypad:

1. Dial the appropriate service number:
   - **Customer Care –**
   - **Directory Assistance –**
   - **Account Info. –**
   - **Sprint Operator –**
   - **Sprint Voice Command –**
2. Press to place the call.

Using the Phone's Scheduler and Tools

In This Section

- Using Your Phone's Scheduler
- Using Your Phone's Alarm Clock
- Using Your Phone's Memo Pad
- Using Your Phone's Tools

Your Sprint PCS Phone is equipped with several personal information management features that help you manage your busy lifestyle. This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments. It takes productivity to a whole new level.

Using Your Phone's Scheduler

Adding an Event to the Scheduler

Your Scheduler helps organize your time and reminds you of important events.

To add an event:

1. Select **Menu** > **Tools** > **Planner** > **Scheduler**.
2. Using your navigation key, highlight the day to which you would like to add an event and press MENU OK.

Tip:	Press the navigation key up or down to scroll by week through the Scheduler.

3. Select **Add New** ( ).
4. Enter a title for the event and press **Next** ( ). (See "Entering Text" on page 41.)
5. Press the navigation key left or right to select one of the following:
   - **Appointment**, **Business**, **Personal**, **Vacation**, or **Birthday**.
6. Select an alarm time for the event by highlighting the alarm field and pressing the navigation key left or right to select one of the following:
   - **No Alarm**, **On Time**, **10min before**, **30min before**, or **1 Hr before** .
7. Select a repeating status for the event by highlighting the repeat field and pressing the navigation key left or right to select one of the following:
   - **Once**, **Daily**, **Weekly**, **Monthly**, or **Yearly**.

8. Select a ringer type for the alarm by highlighting the ringer field and pressing MENU OK.
   - Select the desired ringer category and press MENU OK. Press the navigation key up or down to select the desired ringer and press MENU OK.
9. Select a time for the event by highlighting the **Start** time.
   - Using your keypad, enter the start time and date for the event.
10. Select an end time and date for the event by highlighting the **End** time.
    - Using your keypad, enter the end time and date for the event.
11. Select a Contact for the event by highlighting **go to contact** and pressing MENU OK.
    - Select the desired contact from the list and press MENU OK.
12. Select **Done** ( ) to save and exit.

Event Alerts

There are several ways your Sprint PCS Phone alerts you to scheduled events:

- By playing the assigned ringer type.
- By illuminating the backlight.
- By flashing the LED.

Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. To silence the alarm and reset the schedule, press MENU OK.

Viewing Events

To view your scheduled events:

1. Select **Menu** > **Tools** > **Planner** > **Scheduler**.
2. Using your navigation key, highlight the day for which you would like to view events and press MENU OK. (If you have events scheduled for the selected day, they will be listed in chronological order.)

Tip:	In the Scheduler view, days with events scheduled are displayed with a round square.

3. To display the details of an event listed in the schedule, highlight it and press MENU OK.

Going to Today's Scheduler Menu

To go to the Scheduler menu for today's date:

- Select **Menu** > **Tools** > **Planner** > **Today**.

Erasing a Day's Events

To erase a day's scheduled events:

1. Select **Menu** > **Tools** > **Planner** > **Scheduler**.
2. Using your navigation key, highlight the day for which you would like to erase events and press MENU OK.

Tip:	In the Scheduler view, days with events scheduled are displayed with a round square.

3. Press **Options** ( ) and select **Erase All**. (An alert will appear confirming that all events of today are erased.)
4. Select **Yes** to confirm or **No** to Cancel.

Using Your Phone's Alarm Clock

Your phone comes with a built-in alarm clock with multiple alarm capabilities.

To use the alarm clock:

1. Select **Menu** > **Tools** > **Alarm Clock**.
2. Select **Alarm # 1**, **Alarm # 2**, or **Alarm # 3** and press MENU OK.
3. Turn the alarm on or off by highlighting the activation field.
   - Press the navigation key left or right to select **On** or **Off** .
4. Select a time for the alarm by highlighting the time field.
   - Use your keypad to enter an alarm time.

5. Select a ringer type for the alarm by highlighting the ringer field and pressing MENU OK.
   - Select the desired ringer category and press MENU OK. Press the navigation key up or down to select the desired ringer and press MENU OK.
6. Select a repeating status for the alarm by highlighting the **Repeat** field.
   - Press the navigation key left or right to select **Once**, **Mon to Fri**, **Sat & Sun**, or **Daily .**
7. Select a snooze interval for the alarm by highlighting the **Snooze** field.
   - Press the navigation key left or right to select **5 minutes**, **10 minutes**, **15 minutes**, or **20 minutes**.
8. Select **Done** ( ).

Using Your Phone's Memo Pad

Your Sprint PCS Phone comes with a memo pad you can use to compose and store reminders and notes to help keep you organized.

To compose a note:

1. Select **Menu** > **Tools** > **Memo Pad** .

Note:	If there are no memos saved yet, the **New Memo** screen is automatically displayed.

2. Select **Add New** ( ).
3. Type your note using the numeric keypad and press MENU OK. (See "Entering Text" on page 41.)

To read a saved note:

1. Select **Menu** > **Tools** > **Memo Pad**.
2. Highlight a note and press MENU OK.

To delete saved notes:

1. Select **Menu** > **Tools** > **Memo Pad**.
2. Highlight a note and select **Options** ( ).
3. Select **Erase** and press MENU OK.
4. Select **Yes** and press MENU OK.

Using Your Phone's Tools

In addition to helping your be more efficient and organized, your Sprint PCS Phone offers useful and entertaining tools.

Using the Calculator

Your phone comes with a built-in calculator.

To use the calculator:

1. Select **Menu** > **Tools** > **Calculator**.
2. Enter the first numbers using your keypad.
   - Press the navigation key up for **Multiplication** (x).
   - Press the navigation key down for **Division** (÷).
   - Press the navigation key left for **Subtraction** (-).
   - Press the navigation key right for **Addition** (+).
   - Press or for a **decimal point**.
   - Press for a **negative** number.
   - Press to clear all numbers.
3. Enter the second number and press for **Equals** (=).

Task List

This option allows you to manage daily tasks that include dates, times, and priority levels.

1. Select **Menu** > **Tools** > **Planner** > **Task List**.

Note:	If there are no tasks saved, the **New Task** screen is automatically displayed.

2. Select **Add New** ( ).
3. Enter the task name using the keypad and press MENU OK.
4. Select a Priority level by highlighting **Priority** field.
   - Press the navigation key left or right to select **Low** or **High**.
5. Select a due time by highlighting the **Due Time** field.
   - Using the keypad, enter the due time of the task.
6. Select a due date by highlighting the **Due Date** field.
   - Using the keypad, enter the due date of the task.
7. Select **Done** ( ) to save and exit.

Countdown

This option allows you to enter a timer that counts down to an event based on a date and time specified.

1. Select **Menu** > **Tools** > **Planner** > **Countdown**.

Note:	If there are no countdowns saved, the **New Countdown** screen is automatically displayed.

2. Select **Add New** ( ).
3. Enter the countdown name using the keypad and press .
4. Select a time by highlighting the **Time** field.
   - Using the keypad, enter the time of the countdown.
5. Select a date by highlighting the **Date** field.
   - Using the keypad, enter the date of the countdown.
6. Select **Done** ( ) to save and exit.

World Time

To view the time in over 50 different locations:

1. Select **Menu** > **Tools** > **World Time**.
2. Press the navigation key left or right to scroll through different cities and time zones.
3. Press **Set DST** ( ) to turn daylight savings time on or off.

Using Your Phone's Voice Services

In This Section

- Using Voice-Activated Dialing
- Using Call <Name or #>
- Using Send Text <Name>
- Using Lookup <Name>
- Using Go To <App>
- Using Check <Item>
- Managing Voice Memos

Your Sprint PCS Phone's Voice Services let you place calls using your voice, store voice reminders, and record memos right on your phone. This section includes easy-to-follow instructions on using voice-activated dialing and managing voice memos.

Using Voice-Activated Dialing

In addition to Sprint PCS Voice Command℠ (see page 223), built-in voice recognition software allows you to say commands to perform common functions supported by your phone. There is no voice training required to use the voice recognition feature. You simply say the pre-designated command displayed on your screen in a normal tone of voice to perform the desired function.

To activate voice recognition:

1. Press and hold . (The phone prompts you to say a command.)
2. Wait for the beep and then say one of the following commands:
   - **Call <Name or #>**
   - **Send Text <Name>**
   - **Lookup <Name>**
   - **Go To <App>**
   - **Check <Item>**

When it recognizes one of these commands, the phone launches the associated application. If the phone does not hear a command within approximately eight seconds, it deactivates voice recognition without taking any action.

Voice Launch

Voice Launch allows you to configure how to launch Voice-Activated dialing.

To access voice launch:

1. Press **Menu** > **Settings** > **Voice Service**.
2. Select **Voice Launch** and press MENU OK.
3. Select **Talk Key** or **Talk Key and Flip Open** and press MENU OK.

Using Call <Name or #>

You can voice dial from your phone with a single command by saying "Call" followed by a name or nickname (see contact list documentations for details) and (optionally) a label stored in your contact list, or "Call" followed by a valid phone number. You can also say "Call" by itself and be prompted for the name or number.

Calling Contacts Entries

To place a call using Call <Name or #>:

1. Press and hold TALK.
2. Say "**Call**" followed by the name and the label for that number. For example, say "**Call John Mobile**." The phone dials the number stored for the contact "**John**" with the label "**Mobile**."

If the location recognized for the name does not have a number stored in Contacts, VoiceSignal will play the message "**No number available, John Smith, Mobile,**" and then launch the Contacts application for that name.

If a name has only a single number, or if you know the name but are not sure which number to call, say "Call" followed by the name only. For example, say "Call John." If the name is recognized and there is only one number for the name, VoiceSignal immediately places the call. If there are multiple numbers stored for the contact, the phone prompts you with "Which Number?" and displays a list of options. You can select an option by saying it or by using your keypad.

Calling Nicknames

Your contact list incorporates a field called "**Nickname**." When you add a nickname to a contact, you can say the contact's name or nickname when using the voice features. For example, if you have a contact, "**John Smith**" stored in your contact list, and you add, "**Dad**" to the nickname field, you can call that contact by saying, "**Call John Smith**" or by saying "**Call Dad**."

Tip:	If your contact list contains a name that you have difficulty using with the voice features (such as some unusual or foreign names), you can add a nickname for that contact that spells out the proper pronunciation of that name.

Calling Phone Numbers (Digit Dialing)

To voice dial a number that is not stored in your contact list:

- Say "Call" followed immediately by a valid string of digits to be dialed, for example, say "**Call 555 555 5555**."

Speak naturally and clearly and remember to speak one digit at a time—1-800 should be pronounced "One Eight Zero Zero."

Adapting Digit Dial

Digit Dialing is speaker independent, which means that no training or adaptation is required. Some users with heavy accents or unusual voice characteristics may find difficulty in achieving high accuracy with speaker-independent Digit Dialing, so the Adapt Digits feature allows users to dramatically improve the digit accuracy through adaptation. Users who get acceptable digit recognition accuracy will find no additional benefit to performing the Adapt Digit adaptation.

After you adapt Digit Dial, your phone will be customized to your voice. Other people will not be able to use Digit Dial on your phone unless they reset the phone to factory defaults.

Note:	ONLY adapt Digit Dial if the system is frequently mis-recognizing your speech. You can always restore the system to its original factory setting.

Adaptation involves recording several digit sequences to teach the system your voice. The adaptation process takes about three minutes.

Tips for adapting Digit Dial:

- Adapt digits in a quiet place.
- Make sure you wait for the beep before starting to speak.
- Speak clearly, but say each digit sequence naturally.
- If you make a mistake while recording a sequence of digits, or if there is an unexpected noise that spoils the recording, you can say or select **No** when the prompt asks, "**Did the recording sound OK?**" You will then be prompted to rerecord the sequence.

To adapt Digit Dial to your voice:

1. **Menu** > **Settings** > **Voice Service**.
2. Select **Digit Dialing** and press MENU OK.
3. Select **Adapt Digits** and press MENU OK to begin. (The phone displays the first digit sequence.)
4. Wait for the beep, and then repeat the digits using a normal tone of voice. (The phone plays back your recording and asks you if the recording sounds "**OK**.")
5. If the recording sounds OK (no mistakes and no background noises), say **Yes**.
6. If you need to rerecord the digits to fix any problems, say **No**. (The phone then prompts you to say the digits again.)
7. Wait for the beep, and then record the digits again. (Repeat this step until you are satisfied with the recording.)
8. After confirming that the recording sounds OK, repeat the recording process with the next set of digits. (After six sets of digits, the phone will ask you whether you want to do more adaptation. Answer **Yes**.)
9. Repeat steps 6-9 for another six sets of digits. (After the sixth set of digits, you will be halfway through the session and the phone will ask "More Adaptation?")
10. Select **OK** to continue for six more sets of digits, or press for partial adaptation. When you are finished with a full session, you will reach a screen that reads, "Adaptation Complete."

Note:	It is recommended that you perform the complete adaptation of Digit Dial at least once to achieve the maximum benefit of this feature. If a partial adaptation is performed, you can always return later and resume the process from the halfway point.

Resetting Digit Dial Adaptation

1. **Menu** > **Settings** > **Voice Service**.
2. Select **Digit Dialing** and press MENU OK.
3. Select **Reset Digits** and press MENU OK.
4. Press the navigation key up or down to select **Yes** and press MENU OK.

Using Choice Lists

If VoiceSignal is not confident it has recognized a name or number correctly, it might display a choice list and prompt you with “Call?” followed by the first choice on the list. To confirm the choice, say “Yes,” or to hear the next choice, say “No.” You can also select the correct choice using your keypad. To cancel the command, say “Cancel,” or to say the name or number again, say “Repeat.”

Enabling/Disabling Choice Lists

You can customize whether the Voice Recognition feature displays a list of top voice recognition choices or automatically dials the first number without displaying a choice list.

To enable or disable choice lists for Digit Dial:

1. **Menu** > **Settings** > **Voice Service**.
2. Select **Choice Lists** and press MENU OK.
3. Select **Automatic, Always On** or **Always Off** and press MENU OK.

Using Send Text <Name>

With a single voice command you can launch the text message client on the phone and specify a recipient for the message.

To launch a text message:

1. Press and hold .
2. Say "**Send Text**" followed immediately by the name of a person in your contact list and, optionally, the type of number you want to send it to. For example, say "**Send Text John Smith.**"

If you do not specify the number type and there are multiple numbers for the name, VoiceSignal chooses the mobile number by default.

If you say the "Send" command without specifying a recipient, VoiceSignal prompts you with "Say the name." Say the name of a person in your contact list and, optionally, the type of number.

Note:	When you start a text message through voice activation, the message opens in VoiceMode automatically.

Using Lookup <Name>

You can look up and display contact information for any person stored in your contact list by saying "Lookup," followed by the name.

To use Lookup <Name>:

1. Press and hold .
2. Say "**Lookup John Smith.**" The entry information for the specified contact is displayed.

If you say only "**Lookup**," VoiceSignal prompts you with "**Say the name.**"

Using Go To <App>

You can open an application or access a menu by saying "Go To" followed immediately by the "destination," either an application or a menu.

To see a list of possible destinations:

1. Press and hold .
2. Say "**Go To**" by itself. A list of valid destinations is displayed and prompts you with "**Please Choose**." If the list is too long to fit on one screen, the screen displays "**Next Menu.**" You can say the name of a destination, or say "**Next Menu**" to view the next screen.

Using Check <Item>

You can have the phone play back and display information about its current state, including its phone number, current signal strength, network coverage, and battery level.

To see and hear status information:

1. Press and hold .
2. Say "**Check**" followed immediately by one of the following items:
   - **Status:** plays back and displays ALL status information.
   - **Signal:** plays back and displays current signal strength.
   - **Network:** plays back and displays current network coverage.
   - **Battery:** plays back and displays the current level of battery charge.
   - **My phone #:** plays back and displays your phone number.

For example, say “Check Status.” The phone responds by playing back and displaying the message “Battery...Low.” You can also say “Check” by itself. The phone prompts you to say one of the valid status items.

Coverage	No Coverage - When handset is scanning. Sprint Coverage - Handset in on a non-roam system. Digital Roam - Handset is on a digital roam system.
Signal Strength	Good - Number of bars displayed is 3 or more. Low - Number of bars displayed is 0-2. No Signal - Handset is scanning for system.
Battery	High - Number of bars displayed in the battery icon is 3. Medium - Number of bars displayed is 2. Low - Number of bars displayed is 1. Empty - Low battery alert.

Managing Voice Memos

You can use your phone's Voice Services to record brief memos to remind you of important events, phone numbers, or grocery list items.

Recording Voice Memos

To record a voice memo:

1. Select **Menu** > **Tools** > **Voice Memo** > **Record**.
2. Begin recording after the prompt.

To end the recording of your memo:

- Press MENU OK or .

To record a conversation during a phone call:

1. During a call, select **Options** > **Voice Memo** (A one-minute counter is displayed on the screen indicating the amount of time a single voice memo can be recorded.)
2. To pause the memo, select **Pause** ( ). To resume the recording, select **Resume** ( ).
3. To finish recording, select **Done** ( ).

Note:	Your phone can store a total of ten one-minute memos.

Note:	Your voice is not recorded during this process, only the incoming audio from the other caller.

Voice Memo Options

To play the voice memos you have recorded:

1. Select **Menu** > **Tools** > **Voice Memo**.
2. Select **Review** and press MENU OK. (The phone displays a list of saved memos, with the first one selected.)
3. Highlight the desired memo and press MENU OK.
   — or —
   Press the number corresponding to the memo you want to review.

Erasing Voice Memos

To erase an individual memo:

1. Select **Menu** > **Tools** > **Voice Memo**.
2. Select **Review** and press MENU OK.
3. Highlight the desired memo.
4. Select **Options** ( ) and press **Erase**.
5. Select **Yes** and press MENU OK.

To erase all voice memos:

1. Select **Menu** > **Tools** > **Voice Memo** > **Review**.
2. Press **Options** ( ) and select **Erase All**.
3. Select **Yes** to confirm and press MENU OK.

Using the TransFLASH™ Card

In This Section

- Using Your Phone's TransFLASH Card and Adapter

Your Sprint PCS Phone allows you to use a TransFLASH card and an adapter to expand the phone's available memory space. This highly secure digital card enables images, music, and voice data to quickly and easily be exchanged among SD-compatible devices.

This section details the features and options of your phone's memory card functionality.

Using Your Phone's TransFLASH Card and Adapter

Using the TransFLASH Memory Card

Your Sprint PCS Phone is equipped with a 32 MB TransFLASH (Secure Digital) memory card and its adapter to expand the phone's available memory space. It allows you to easily store images, videos, music files, and voice data in your phone.

Inserting the TransFLASH Memory Card

To insert the TransFLASH memory card into your phone:

1. Open the TransFLASH access panel located on the bottom right side of the phone.
2. Position the TransFLASH card perpendicular to the opening and gently slide it into place until it is fully inserted and locked.

Note:	Be sure to use only recommended memory cards (8 MB - 512 MB). Using non-recommended memory cards could cause data loss and damage your phone.

Removing the TransFLASH Memory Card

To remove the TransFLASH memory card from your phone:

1. Open the TransFLASH access panel located on the bottom right side of the phone.
2. Push in and then release the TransFLASH card to eject.
3. Pull the TransFLASH memory card out of the handset.

Note:	If you remove your memory card, the location to save images will automatically default back to **Phone**.

TransFLASH memory Icon Indicators

The following icons will appear on your phone's display screen when a TransFLASH memory card is properly inserted into the TransFLASH memory card slot:

Indicates that a TransFLASH memory card has been inserted into your handset.

Note:	**DO NOT** remove a TransFLASH memory card while files are being accessed or transferred. It will result in loss or damage of data.
	Make sure your battery is fully charged before using the TransFLASH memory card. Your data may become damaged or unusable if the battery runs out while using the TransFLASH memory card.

Using the TransFLASH SD Adapter

The supplied TransFLASH SD (memory) adapter allows TransFLASH memory cards to be used in SD-compatible devices. Before using, you will need to insert the TransFLASH memory card into the TransFLASH SD adapter.

To insert the TransFLASH memory card into the TransFLASH SD adapter:

- With the label side of the TransFLASH memory card facing up, insert the card into the supplied TransFLASH SD adapter and gently slide the card until it is fully inserted.

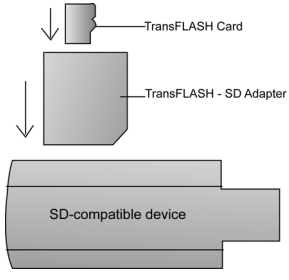

To remove the TransFLASH memory card from the TransFLASH SD adapter:

- Hold the front edge of the TransFLASH memory card and gently pull outward to remove it from the adapter.

Using the Built-in Camera

In This Section

- Taking Pictures
- Storing Pictures
- Recording Videos
- Storing Videos
- Sending Sprint PCS Picture Mail℠
- Managing Sprint PCS Picture Mail

Your Sprint PCS Phone's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends. It's fun and as easy to use as a traditional point-and-click camera: just take a picture, view it on your phone's display, and send it from your phone to up to ten people.

This section explains the features and options of your Sprint PCS Phone's built-in camera.

Taking Pictures

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the phone's camera mode whether the phone is open or closed.

To take a picture with the phone open:

1. Press **Menu** > **Pictures** > **Camera** (Additional camera options are available through the camera mode **Options** menu. See "Camera Mode Options" on page 128 for more information.)

Shortcut:	To activate camera mode, you can also press the camera button twice (see illustration).

2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press the camera button or MENU OK until the shutter sounds. (Pictures are stored automatically on the TransFLASH card, if it is inserted.)
   - To return to camera mode to take another picture, press the camera key.
4. Press for options:
   - **Send Msg** to send the picture to up to ten contacts at one time. (See page 138 for details.)
   - **Postcard** to save handwritten text across the original image.

- **Upload** to upload the picture you just took to the Sprint PCS Picture Mail Web site (www.sprint.com/picturemail). Depending on your settings, you may be prompted to accept a Sprint PCS Vision connection.
- **Assign** to assign the picture as a Screen Saver.
- **Erase** to delete the picture you just took.
- **Order Prints** to order a printed picture of the image saved in your phone or memory card.
- **Post to Service** allows you to post your image to an online third party service.
- **Camera Mode** to return to the camera to take additional pictures.

Creating Your Sprint PCS Picture Mail Password

The first time you use any of the picture management options involving the Sprint PCS Picture Mail Web site, you will need to establish a Sprint PCS Picture Mail password through your phone. This password will also allow you to sign in to the Sprint PCS Picture Mail Web site at www.sprint.com/picturemail to access and manage your uploaded pictures and albums.

To create your Sprint PCS Picture Mail password:

1. Select **Menu** > **Pictures** > **My Albums** > **Online Albums**. (You will be prompted to create a Sprint PCS Picture Mail password.)

Note:	If your Sprint PCS Service Plan does not include Sprint PCS Picture Mail, you will first be prompted to subscribe to the service for an additional monthly charge.

2. Enter a four- to eight-digit password and press MENU OK. (You will be prompted to confirm your password.)
3. Please wait while the system creates your account.

Tip:	Write down your Sprint PCS Picture Mail password in a secure place.

Once you have received confirmation that your account has been successfully registered, you may upload and share pictures and access the Sprint PCS Picture Mail Web site.

Camera Mode Options

When the phone is open and in camera mode, press to display additional camera options:

- **Flash** to activate the flash. (See “Setting the Flash” on page 129.)
- **Self-timer** to activate the camera’s timer. (See “Setting the Camera Self-timer” on page 130.)
- **Fun Tools..** to select from the following options:
  - **Fun Frames** to select your favorite fun picture frame to decorate your picture.
  - **Color Tones** to select a wide variety of color tones for the picture (**Auto, Monochrome, Green, Sepia,** or **Blue**). (The default setting is **Auto**.)
- **Controls..** to select from the following options:
  - **Brightness** to manually set the brightness. Press the navigation key up (increase) or down (decrease) to select a setting and press

.
  - **White Balance** to adjust white balance based on changing conditions. Select from **Auto, Sunny, Cloudy, Tungsten, Fluorescent,** or **Manual**.
- **Settings..** to select **Resolution**, **Quality**, **Shutter Sound**, or **View Mode**. (See “Selecting Camera Settings” on page 131 for details.)

- **Review Media** (to go to your phone's **In Phone** folder. See "In Phone Folder" on page 132 for details.)
- **Camcorder** (to switch to Video mode. See "Recording Videos" on page 134 for details.)
- **Save To..** to select between **In Phone** or **In Memory Card** when saving images or files.

Setting the Flash

To activate the flash:

1. From camera mode, select **Options** ( ).
2. Select **Flash** and press MENU OK.
3. Select one of the following options and press MENU OK.
   - **Off** to deactivate the flash.
   - **On This Shot** to activate the flash for one shot.
   - **Always On** to activate the flash for all pictures.

Setting the Camera Self-timer

To activate the Self-timer:

1. From camera mode, select **Options** ( ).
2. Press the volume key up to select **Self-timer** and press MENU OK.
3. Highlight the length of delay you want the timer to use (**Off**, **5 Seconds** or **10 Seconds**) and press MENU OK.
4. Press the camera key when you are ready to start the timer. (is displayed in the upper right portion of the main LCD during the Self-timer countdown.)
5. Get ready for the picture. (When the timer is started, the phone will begin to beep and the timer numbers turn red when there is only three seconds left.)

To cancel the Self-timer after it has started:

- Press BACK.

Using the Zoom

This feature allows you to zoom in on an object when you take a picture. Depending on your resolution settings, you can adjust the zoom up to five levels.

Note:	Zoom is not available when the resolution is set to 1280x960.

To use the zoom:

1. From camera mode, press the navigation key left or right.
2. Press the camera key to take the picture. (The picture will automatically be saved in the In Phone folder.)

Selecting Camera Settings

To select your camera settings:

1. From camera mode, select **Options** ( ).
2. Select **Settings** and press MENU OK.
3. Select one of the following options and press MENU OK.
   - **Resolution** to select a picture's file size (**1.3MP: 1280x960, High: 800x600, Med: 640x480,** or **Low: 320x240**).
   - **Quality** to select the picture quality setting (**Fine, Normal,** or **Economy**).
   - **Shutter Sound** to select a shutter sound (**Off**, **Shutter 1-3**, or **Say Cheese**).
   - **View Mode** to select between **Full Screen** or **Wide Screen** format.

Viewing Your Camera's Status Area Display

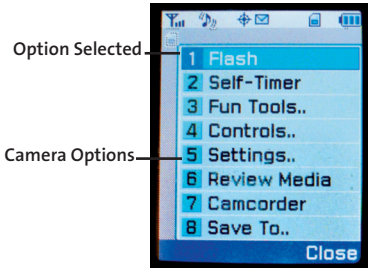

Storing Pictures

Your phone's picture storage area is called **My Albums**. There are three types of folders that can be used separately according to your needs:

- **In Phone**
- **Memory Card**
- **Online Albums**

In Phone Folder

Once a picture is taken, it is automatically saved to the **In Phone** folder (unless the TransFLASH memory card is inserted.) From the In Phone folder, you can view all of the pictures you have taken, store selected images in your phone, send pictures to the Sprint PCS Picture Mail Web site (www.sprint.com/picturemail), delete images, and access additional picture options.

To review your stored pictures in the In Phone folder:

1. Select **Menu** > **Pictures** > **My Albums** > **In Phone**.
2. Use your navigation key to view and scroll through the pictures.

In Phone Folder Options

When you are viewing the In Phone folder, press **Options** ( ) to display the following options:

- **Send** to send an image to another user using picture mail.
- **Upload** to upload pictures from the In Phone folder to the Sprint PCS Picture Mail Web site (www.sprint.com/picturemail). Depending on your settings, you may be prompted to accept a Sprint PCS Vision connection. Choose from the following options:

Note:	If this is the first time you have accessed the Sprint PCS Picture Mail account, you will be prompted to create your Sprint PCS Picture Mail Password. See “Creating Your Sprint PCS Picture Mail Password” on page 127.

- **Post to Service** to send the image to a number of popular third-party Web image services.
- **Print..** to print an image by mail, at a retail outlet, PictBridge connection, or Bluetooth connection.
- **Assign** to assign the current image as a Picture ID, Screen Saver, or Incoming Call.
- **Erase** to erase the image or selected images.
- **Copy/Move** to copy or move the image from the In Phone memory to the installed memory card.
- **Detail/Edit** to attach a text message or view the media information associated with the image.
- **Album list** to display the list of albums saved in your phone and installed memory card.
- **Media Filter** to filter only images or only videos or to display all media types.
- **Camera Mode** to switch back to the camera mode.

Recording Videos

In addition to taking pictures, you can also record, view, and send videos to your friends and family with your phone's built-in video camera.

To record a video:

1. Select **Menu** > **Pictures** > **Camcorder**.
2. Using the phone's main LCD as a viewfinder, aim the lens at your subject.
3. Press to begin recording. (Maximum recording time for video mail is 30 seconds.)
   - To return to camera mode to take another video, press .
4. Press to stop recording. (The video will automatically be saved in the In Phone folder.)
5. Press **Next** ( ) and select from one of the following options and press :
   - **Send Msg** to send the video. (See page 137 for details.)
   - **Play** to play the video that was just captured.
   - **Upload** to upload the video to online albums.
   - **Assign** to assign the video as an animated screen saver.
   - **Erase** to delete the video.
   - **Camcorder** to return to camcorder mode.
   - **Review Media** to review all images and videos saved.

Video Mode Options

When the phone is open and in camcorder mode, press to display additional camcorder options:

- **Movie Light** to activate the movie light and set it to:
  - **Off** to turn off the movie light for all movies.
  - **On This Movie** to turn on the movie light for current video clip only.
  - **Always On** to turn on the movie light for all movies.
- **Self-timer** to activate the camera's timer. (See "Setting the Camera Self-timer" on page 130.)
- **Color Tones** to select a wide variety of color tones for the picture (**Auto**, **Monochrome**, **Green**, **Sepia**, or **Blue**. The default setting is **Auto**.)
- **Controls..** to select from the following options:
  - **Brightness** to manually set the brightness. Press the navigation key left (increase) or right (decrease) to select a setting and press MENU OK.
  - **White Balance** to adjust white balance based on changing conditions. Select from **Auto, Sunny, Cloudy, Tungsten, Fluorescent,** or **Manual**.
- **Settings..** to select video **Quality**.

- **Review Media** to display the videos saved in the In Phone folder. (See “In Phone Folder” on page 132 for details.)
- **Camera Mode** to switch to Camera mode. (See “Taking Pictures” on page 126 for details.)
- **Save To..** to select between **In Phone** or **In Memory Card** when saving images or files.

Setting the Movie Light

To set the movie light:

1. Select **Menu** > **Pictures** > **Camcorder**.
2. Select **Options** ( ).
3. Press the volume key up to select **Movie Light** and press MENU OK.
4. Select one of the following options and press MENU OK.
   - **Off**
   - **On This Movie**
   - **Always On**

Setting the Camcorder Self-timer

The self-timer function operates the same as it does in Camera mode. For more information on using the self-timer, see “Setting the Camera Self-timer” on page 130.

Selecting Video Settings

To select your camcorder settings:

1. From camcorder mode, select **Options** ( ).
2. Press the volume key up to select **Settings** and press MENU OK.
3. Select one of the following options and press MENU OK.
   - **Quality** to select the video quality setting (**Fine, Normal,** or **Economy**).

Storing Videos

Your phone's video storage area is called **My Albums**. There are three types of folders in the My Albums menu that can be used separately according to your needs:

- **In Phone** (See "In Phone Folder" on page 132.)
- **Memory Card**
- **Online Album**

Sending Sprint PCS Picture Mail℠

Once you've taken a picture, you can use the messaging capabilities of your Sprint Power Vision Phone to instantly share it with family and friends. You can send a picture to up to ten people at a time using their email addresses or their Sprint PCS Phone Numbers.

Sending Pictures From the In Phone Folder

To send pictures from the In Phone folder:

1. Press **Menu** > **Pictures** > **My Albums** > **In Phone**.
2. Highlight a picture you wish to send and press MENU OK. (The check box on the upper left corner will be marked. You can select multiple pictures.)
3. Select **Options** ( ) and press **Send**.
4. Select **To Contacts** or **Postcard** and press MENU OK.

Note:	The first time you send Sprint PCS Picture Mail, you will be prompted to establish a Sprint PCS Picture Mail Web site account and password. (See "Creating Your Sprint PCS Picture Mail Password" on page 127.)

5. Select a contact, enter a mobile number, or enter an email address using the keypad and select **Done** ( ).
6. Enter additional recipients or select **Next** ( ) to continue.
7. If you wish to include a subject, scroll to **Subj** and select **Add** ( ). Enter your subject using the keypad and select **Next** ( ) to save and exit.
8. If you wish to include a text message, scroll to **Text** and select **Add** ( ). Enter your message using your keypad (or press **Options** [ ] to select from **Preset Msg** or **Recent Msg**) and select **Next** ( ) to save and exit. (See "Entering Text" on page 41.)

9. If you wish to include an audio message with the picture, highlight the box next to **Audio** and select **Record** (). Press to start recording. (Maximum recording time is 30 seconds.)
10. Confirm the recipients, message, audio message, and picture.
    - To change a recipient, highlight the recipient, press the appropriate softkey, and follow the instructions in step 5 to select or edit the recipient.
    - To change the text message, scroll to **Text** and press the appropriate softkey.
    - To change the voice memo, highlight the box next to **Audio** and press the appropriate softkey.
    - To change the attached picture(s), select the thumbnail picture and press the appropriate softkey. Select **In Phone** and press **Next** ().
11. Press to send the picture.

Sending Pictures From Messaging

You can also send Sprint PCS Picture Mail from your phone's Messaging menu.

To send pictures from the Messaging menu:

1. Select **Menu** > **Messaging** > **Send Message** > **Picture Mail**.
2. Select a contact, enter a mobile number, or enter an email address using the keypad and select **Done** ().
3. Enter additional recipients or select **Next** () to continue.

4. Use the navigation key to select one of the following and press MENU OK.
   - In Phone
   - Memory Card
   - Online Albums
   - Take New Picture
   - Take New Video
   - Text Only
5. Display the picture you wish to send and press MENU OK. (You can select multiple pictures.)
6. Select **Next** ( ) to continue.

Tip:	To take and send a new picture from Messaging, select **Take New Picture** during step 4 above, take the new picture, press **OK** (right softkey), and follow steps 5-11 in "Sending Pictures From the In Phone Folder" on page 138.

7. Follow steps 7-11 in "Sending Pictures From the In Phone Folder" on page 138.

Managing Sprint PCS Picture Mail

Using the Sprint PCS Picture Mail Web Site

Once you have uploaded pictures from your phone to your online Sprint PCS Picture Mail account at www.sprint.com/picturemail (see "In Phone Folder Options" on page 132), you can use your personal computer to manage your pictures. From the Sprint PCS Picture Mail Web site (www.sprint.com/picturemail) you can share pictures, edit album titles, add captions and organize images. You can even send your pictures to be printed at participating retail locations.

You will also have access to picture management tools to improve and customize your pictures. You'll be able to lighten, darken, crop, add antique effects, add comic bubbles and cartoon effects, and use other features to transform your pictures.

To access the Sprint PCS Picture Mail Web site:

1. From your computer's Internet connection, go to www.sprint.com/picturemail.
2. Enter your Sprint PCS Phone Number and Sprint PCS Picture Mail password to register. (See "Creating Your Sprint PCS Picture Mail Password" on page 127.)

Managing Online Pictures and Videos From Your Phone

You can use your phone to manage, edit, or share pictures you have uploaded to the Sprint PCS Picture Mail Web site at www.sprint.com/picturemail. (See "In Phone Folder Options" on page 132 for information about uploading.)

To view your online pictures from your phone:

1. Select **Menu** > **Pictures** > **My Albums** > **Online Albums**. (Depending on your settings you may be prompted to accept a Sprint PCS Vision connection.) (The **My Uploads** folder and other folders created by the user are displayed.)
2. Highlight **My Uploads** or any other folders created by the user and press MENU OK to display. (Thumbnail pictures, up to nine per screen, are displayed.)

Tip:	To expand a selected picture from thumbnail to full-screen, select **Expand** (left softkey).

3. Use your navigation key to select a picture.
4. Press **Options** ( ) to display your online picture options.

Uploading Pictures

To upload pictures:

1. Press **Menu** > **Pictures** > **My Albums** (Thumbnail pictures will be displayed.)
2. Select **In Phone** or **Memory Card** and press MENU OK.
3. Select the picture(s) you wish to upload and press **Options** ( ).
4. Select **Upload**. and choose **My Uploads** or **My Albums** and press MENU OK.
5. Select **Continue** ( ) to start uploading.

Downloading Your Online Pictures

From your online Sprint PCS Picture Mail albums display at www.sprint.com/picturemail, you can select pictures to download to your phone's Saved to Phone folder.

To download pictures from the Sprint PCS Picture Mail Web site:

1. From the online pictures display, select the picture you wish to download and press **Options** ( ). (See "Managing Online Pictures and Videos From Your Phone" on page 142.)
2. Highlight **Save to** and press MENU OK.

3. Select one of the following options and press MENU OK.
   - **In Phone** to download the picture and save to the phone.
   - **In Memory Card** to download and save the picture to the installed memory card.

Sending Online Sprint PCS Picture Mail

To send an album from the online pictures menu:

1. From the online albums display, select an album you wish to send and press **Send** (). (See "Managing Online Pictures and Videos From Your Phone" on page 142.)
2. Select **Contacts**.
3. Highlight a recipient and press MENU OK.
4. Press **Done** () when you have finished selecting recipients.
5. Press **Next** ().
6. To include a text message, highlight **Text** and press the appropriate softkey. Enter your message and press MENU OK.
7. Confirm your recipients and attached data.
8. Press the appropriate softkey to send the Sprint PCS Picture Mail.

Accessing Online Picture Options From Your Phone

1. Select a picture from your online Picture Mail. (See "Managing Online Pictures and Videos From Your Phone" on page 142.)
2. Select **Options** ( ) to display options.
3. To select an option, highlight it and press MENU OK.
   - **Copy/Move** to copy or move pictures to a selected album:
     - **Copy This** to copy the selected picture to the album.
     - **Copy All** to copy all pictures in the current album (or Inbox) to the target album.
     - **Move This** to move the selected picture to the album.
     - **Move All** to move all pictures in the current album (or Inbox) to the target album.
   - **Save to** copies the selected picture to the In Phone or In Memory Card selection folder. (See "In Phone Folder" on page 132.)
   - **Erase** to select **Erase Selection** or **Erase All** to erase a single picture or all pictures saved in the current album (or Inbox).

To access your online Albums options from your Sprint PCS Phone:

1. Display the album list in the Online Sprint PCS Picture Mail menu. (See “Managing Online Pictures and Videos From Your Phone” on page 142.)
2. Use your navigation key to select an album (or Inbox).
3. Select **Options** (right softkey) to display options.
4. To select an option, highlight it and press MENU OK.
   - **Send to Contact** to send the album to a contact.
   - **New Album** to create a new album.
   - **Rename Album** to rename the album (only available on albums created by the user, default albums cannot be renamed.)
   - **Erase Album** to erase the album (only available on albums created by the user, default albums cannot be erased)
   - **Album Info** to display the album information.

Printing Pictures Using PictBridge

PictBridge is an industry standard established by the Camera & Imaging Products Association (CIPA) that enables a range of digital photo solutions, including direct photo printing from a digital camera to a printer without the need for a PC.

Printing From Your Phone

The A920 comes equipped with a built-in camera that allows you to print images directly to a printer using the PictBridge technology. A USB cable must be connected between the two devices before any printing can occur.

To use PictBridge to print pictures from your phone:

1. Insert one end of the accessory cable into the USB slot on the printer. (Printer must support PictBridge technology.)
2. Select **Menu** > **Pictures** > **PictBridge Print**.
3. Insert the USB cable into your phone.
4. Read the Connect Printer message and select **OK** ( ).
5. Highlight the desired image and select **Next** ( ). (To select multiple images, press MENU OK to place a check mark next to each image selected.)
6. Highlight **Copies** and press the navigation key left or right to select the desired number of copies to print.
7. Press the navigation key down to select **Type**. Press the navigation key left or right to select one of the following:
   - **Standard**: prints the standard image.
   - **Index**: prints the index information.

Note:	These options may vary and are dependent on the printer's capabilities.

8. Press the navigation key down to select **Size**. Press the navigation key left or right to select one of the following sizes:
   - **4x6**
   - **Default**

Note:	These sizes may vary and are dependent on the printer's capabilities.

9. Press the navigation key down to select **Date Print**. Press the navigation key left or right to turn on or off.
10. Press the navigation key down to select **Border**. Press the navigation key left or right to turn on or off.
11. Select **Preview** ( ) to preview the image, or select **Print** ( ) to print the image.
12. Select **Yes** to confirm printing and press

.

Note:	Printing instructions may vary depending on the model of PictBridge printer being used.

Settings and Info

The settings and info menu allows you to configure where pictures or videos are saved, view your account information, or set the view between portrait or landscape mode.

To access the settings and info menu:

1. Select **Menu** > **Pictures** > **Settings & Info**.
2. Select one of the following options and press MENU OK.
   - **Save to** to select where to save pictures and videos. The available options are **In Phone** and **In Memory Card**.
   - **Account Info** to display your current Sprint account settings via an online connection.
   - **View Mode** to select a picture view mode of portrait or landscape when viewing pictures in the In Phone folder.

Using Your Phone's Built-in Media Player

In This Section

- Your Multimedia Channel Options
- Accessing Your Media Player's Channel Listings
- Playing a Video or Audio Clip
- Multimedia FAQs

Your phone's built-in media player gives you the ability to listen to audio clips and view video clips right from your phone's display. It's a great way to stay up-to-date with news, weather, and sports information while also enjoying the latest blockbuster movie trailers or music videos – anywhere, anytime on the Nationwide Sprint PCS Network. Just access your media player from your phone's main menu, scroll to your choice of channel, and select one of the video or audio clips to play. It's like having a TV in the palm of your hand.

This section explains the features and options of your phone's built-in media player.

Your Multimedia Channel Options

Sprint TV[SM] offers a variety of accessible audio or video channels, depending on your Sprint PCS Service Plan and multimedia subscriptions. Your subscription options include a comprehensive basic service as well as a full menu of a variety of additional channel options.

- **Preview Channel:** This free channel lets you sample clips from all of the available channels before you make a decision to subscribe. It's like viewing the movie preview before deciding whether you want to spend the money to go see the full motion picture.
- **Sprint TV[SM]:** This comprehensive basic service gives you access to a variety of content from familiar brands. Think of it as "basic cable" for your phone. It allows you unlimited access to this content as long as you continue to pay the monthly subscription fee.
- **Available Individual Channel Options:** You also have the option of subscribing to individual channels from an extensive menu offering. These channels are available for a monthly subscription fee and allow you unlimited access as long as you continue to pay your monthly subscription fee.

You can always visit www.sprint.com for a comprehensive up-to-date Channel Guide, giving you an explanation of the available channels as well as information on subscription rates.

Accessing Your Media Player's Channel Listings

It's easy to access and view the multimedia Channel Listings on your A920 by Samsung from the phone's main menu.

To access your media player and Channel Listings:

- Select **Menu** > **Media Player**.
  - **My Channels:** These include the complimentary Previews channel that Sprint provides, as well as any available individual channels for which you have purchased access. If you have purchased Sprint TV, either through a Sprint TV Vision Plan subscription or by purchasing it separately, it will be displayed here.
  - **Available Channels:** These are channels that have not yet been purchased but are available to access for a monthly subscription fee. Use your navigation key to scroll through and select a channel, and follow the onscreen instructions to purchase access to it. Upon purchasing access to one of these channels, the channel will be listed, along with its corresponding channel number, in the **My Channels** section of your media player's Channel Listings. You will see it displayed in this section the next time you access your phone's media player.

Playing a Video or Audio Clip

To select and play a media clip:

1. Select **Menu** > **Media Player**.
2. Use your keypad to enter a channel number (or use your navigation key to scroll to a channel and press MENU OK).
   - **Channel Listing:** If you have selected a channel that you've already signed up for (or if it's a channel with no monthly fee), you will see a list of available clips.
   - **Memory Card**: Media content that was saved to the TransFLASH memory card.
   - **My Play List:** If you have selected a channel you have not yet signed up for, you will be prompted to accept the corresponding monthly charge. Follow the onscreen prompts to subscribe to the selected channel. (A list of available clips will be displayed.)
3. Scroll to the clip you would like to play and press **Select** ( ) or MENU OK. (The clip will automatically load and begin playing.)

Note:	The first time you access one of your Available Channels, you will be prompted to accept the corresponding monthly fee (unless it's a channel that doesn't have an associated monthly fee). Accepting the charge gives you access to the channel for as long as you continue to pay the monthly fee. If you accept the fee, the next time you access your phone's media player, this channel will appear in the My Channels section of your Channel Listings.

Multimedia FAQs

1. **Will I know if I'm receiving an incoming call while I'm viewing or listening to an audio clip?**
   No. All incoming calls will roll into voicemail while you are playing a clip. If the caller leaves a voicemail, the voicemail icon will appear on the screen.
2. **How long are the clips? Will I know the estimated time it will take to play the clip prior to accessing it?**
   Once you have selected a channel, you will see a listing of the available clips, with the clip's length appearing after the clip's title. In general, a clip's duration will depend on the story or content being provided, and can be fairly short or as long as a few minutes.
3. **Can I access a multimedia clip wherever I am, as long as I have my phone?**
   As long as you are on the Nationwide Sprint PCS Network, you will have access to the audio and video clips.

Note:	Sprint TV Service does not work while roaming off of the Nationwide Sprint PCS Network or where service is unavailable.

4. **Are the videos that I'm viewing "live" videos?**
   It depends on the content provider. Some of the channels available through Sprint TV stream live content. Others provide media on demand with video and audio clips that are refreshed throughout the day, but that are not "live."
5. **After purchasing access to an Available Channel for a monthly fee, do I receive any confirmation? That is, how do I know it has been purchased?**
   The next time you access your media player's Channel

Listings, the purchased channel title and corresponding number will appear in the My Channels section.

6. **Why are some channels already pre-loaded into the My Channels section?**
   Some channels, such as Previews, are offered free of charge as a customer courtesy. These channels automatically appear in the My Channels section of your Channel Listings.
7. **If I don't subscribe to Sprint PCS Vision Plan, am I still able to view the multimedia clips?**
   Yes; for service access charges, please consult your Sprint PCS Service Plan or visit www.sprint.com.
8. **How can I easily access a channel without having to scroll through all the channels in my Channel Listings?**
   Each channel will have a number to the left of it. You can simply press this number to quickly access the clips located within that channel.

Tip:	When entering the specific channel number, channels 01 - 09 do not require you to enter a "0." For example, to access channel "07," just press the "7" key.

9. **What does it mean when the video pauses and I see the word "loading" at the bottom of the screen?**
   This happens when the media player is in the process of loading the data necessary to play the clip. It typically occurs when there is heavy traffic on the network.
10. **How can I cancel service if I decide I don't want it?**
    To cancel your Sprint TV Service, visit www.sprint.com and sign on to **My PCS** with your account number and password. From this page you have the ability to cancel the service and/or any Available Channels to which you subscribe.

11. **If I place my stereo headphones on and insert them into the phone's headset jack, can I close the flip while I am playing an audio (or video) clip without interrupting the clip?**
Yes. When you insert your stereo headset into the phone's headset jack, the phone automatically goes into “headset mode,” allowing you to close the flip and continue playing the clip (likewise, if your phone is in “headset mode,” a phone call will not become disconnected by closing the flip).

12. **Can I surf to a different channel while I am playing a clip?**
Yes; while you are playing a clip, you can use the up and down navigation buttons to surf to a different channel. A small pop-up screen will appear that tells you which channel you are watching as well as other channels you have access to. Use the navigation buttons to scroll through the different channels. Once you find a channel that you want to watch, scroll to it and press MENU OK (or simply wait approximately three seconds) and the channel will begin loading.

Using Bluetooth Wireless Technology

In This Section

- Turning Bluetooth On and Off
- Using the Bluetooth Settings Menu
- Bluetooth Profiles
- Pairing Bluetooth Devices

Your Sprint PCS Phone features built-in Bluetooth wireless technology, allowing you to share information more easily than ever before. Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets, hands-free car kits, and Bluetooth-enabled handhelds, PCs, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 10 meters (30 feet).

This section details how to set up and make the most of your phone's Bluetooth capabilities.

Turning Bluetooth On and Off

By default, your device's Bluetooth functionality is turned off. Turning Bluetooth on makes your device "discoverable" by other in-range Bluetooth devices.

To turn Bluetooth on:

1. Select **Menu** > **Settings** > **Bluetooth**> **Enable**.
2. Press the navigation key up or down to select **On** and press MENU OK to enable Bluetooth.

To turn Bluetooth off:

1. Select **Menu** > **Settings** > **Bluetooth**> **Enable**.
2. Press the navigation key up or down to select **Off** and press MENU OK to disable Bluetooth.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:

- – Bluetooth is active.
- – Bluetooth is connected to a device.

Using the Bluetooth Settings Menu

The **Bluetooth Settings** menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Entering or changing the name your phone uses for Bluetooth communication.
- Setting your phone's visibility (or "discoverability") for other Bluetooth devices.
- Displaying your phone's Bluetooth address.

To access the Bluetooth Settings menu:

1. Select **Menu > Settings > Bluetooth**.
2. Use the navigation key to select **Visibility**, **Device Name**, or **Device Info** and press MENU OK.

Bluetooth Settings: My Bluetooth Name

The My Bluetooth Name section of the Bluetooth Settings menu allows you to select a Bluetooth name for your phone. Your phone's Bluetooth name will appear to other in-range Bluetooth devices, depending on your visibility settings.

To set a Bluetooth name for your phone:

1. Select **Menu > Settings > Bluetooth > Device Name**.
2. Press and hold BACK to clear the current name.
3. Use your keypad to enter a new name and press MENU OK to save and exit.

Bluetooth Settings: Visibility

The Visibility section of the Bluetooth Settings menu allows you to manage your availability to other Bluetooth devices.

To configure your phone's visibility (discoverability) to other Bluetooth devices:

1. Select **Menu > Settings > Bluetooth > Visibility**.
2. Select your desired visibility setting and press MENU OK:
   - **Always Visible** to allow other Bluetooth devices to detect and identify your phone.
   - **Visible for 3 min** to allow other devices three minutes to detect your handset before changing your status to hidden.
   - **Hidden** to prevent other Bluetooth devices from detecting and identifying your phone.

Note:	Any changes you make to your Bluetooth settings will be saved when you exit the Bluetooth Settings menu. Any changes to the settings will be applied to all devices in the same category.

Bluetooth Settings: My Bluetooth Address

To display your phone's Bluetooth address:

- Select **Menu > Settings > Bluetooth > Device Info.**

Bluetooth Profiles

All of the Bluetooth settings you configure are stored in your phone's Bluetooth user profile. Different profiles can be used for specific Bluetooth functions.

- **Headset Profile** – Bluetooth technology connects the phone to a wireless Bluetooth-enabled headset. When an incoming call is received, the ringer can be heard through the headset instead of the handset. The call can then be received by pushing a button. While using the handset, you can use the headset instead of the phone by pushing a button on the headset, the same as inserting a jack into the phone. Increase or decrease the volume by using the volume key on the side of the handset.
- **Hands-Free Profile** –Bluetooth technology connects the phone to a wireless Bluetooth-enabled car kit. Calls can be received by pressing a button on the headset or device. For dialing, four functions are supported: recent call dial, voice dial, speed dial, and number dial. Increase or decrease the volume by using the volume key on the side of the handset.
- **DUN: Dial-Up Network Profile** – Bluetooth technology functions as a wireless data cable, connecting a PC or PDA to a network through your handset.
- **BPP: Basic Printing Profile** – Bluetooth technology functions as a PictBridge printing connection to a printer from your handset.
- **OPP: Object Push Profile** – is based on the Generic Object Exchange (OBEX) profile which uses predefined object formats. The object formats are vcard, vcal, vmsg and vnote.

Pairing Bluetooth Devices

Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When devices are paired, a passkey is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

For a successful pairing to occur, make sure that the handset is in idle mode prior to performing a pairing operation. This will insure that the device is located properly and a valid connection will be made.

To pair your phone with another Bluetooth device:

1. Select **Menu > Tools> Bluetooth > Add New > Search**. (Your phone will display a list of discovered in-range Bluetooth devices.)
2. Select the device you wish to pair with and press .
3. Enter the passkey and press .
4. Highlight the device and press for **Connect**. (**Connection Successful** will be displayed if the device is connected properly.)

Waiting for Pairing

If you are going to be using a Dial-Up Network (DUN) profile to pair with a PC or PDA, you will need to allow the other device to initiate pairing with your phone.

To allow your phone to be paired with another Bluetooth device:

1. Select **Menu > Tools> Bluetooth > Add New > Wait for request**.
2. Select **Always Visibile** or **Visble for 3min** and press MENU OK.
3. Follow the onscreen prompts to enter your passkey and press MENU OK.

Sprint PCS Service Features

Sprint PCS Service Features: The Basics

In This Section

- Using Voicemail
- Using Text SMS Messaging
- Using Voice SMS Messaging
- Using Caller ID
- Responding to Call Waiting
- Making a Three-Way Call
- Using Call Forwarding

Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your Sprint PCS Service. This section outlines your basic Sprint PCS Service features.

Using Voicemail

Setting Up Your Voicemail

All unanswered calls to your Sprint PCS Phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Sprint PCS Voicemail and personal greeting as soon as your phone is activated.

To set up your voicemail:

1. Press and hold .
2. Follow the system prompts to:
   - Create your passcode.
   - Record your name announcement.
   - Record your greeting.
   - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding , bypassing the need for you to enter your passcode).

Note:	**Voicemail Passcode** If you are concerned about unauthorized access to your voicemail account, Sprint recommends you enable your voicemail passcode.

Voicemail Notification

There are several ways your Sprint PCS Phone alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

- Press and hold .

To display your Missed Log:

- Press the navigation key up.

Note:	When you are roaming off the Nationwide Sprint PCS Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your Sprint PCS Phone number. When your voicemail answers, press (*) and enter your passcode. You will be charged roaming rates when accessing voicemail while roaming off the Nationwide Sprint PCS Network. Your phone accepts messages even when it is turned off. However, you are notified of new messages only when your phone is turned on and you are in a Sprint PCS Service Area.

Retrieving Your Voicemail Messages

You can review your messages directly from your Sprint PCS Phone or from any other touch-tone phone. To dial from your Sprint PCS Phone, you can either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access

- Press and hold . (Your phone will dial your voicemail box.)

Using the Menu Keys on Your Phone to Access Your Messages

1. Select **Menu** > **Messaging** > **Voicemail**. > **Call Voicemail**.
2. Press to listen to your messages.

Note:	You are charged for airtime minutes when you are accessing your voicemail from your Sprint PCS Phone.

Using a Phone Other Than Your Sprint PCS Phone to Access Messages

1. Dial your Sprint PCS Phone number.
2. When your voicemail answers, press .
3. Enter your passcode.

Tip:	When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press **4** during the header.

Voicemail Button Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 177.

Voicemail Options

Your Sprint PCS Phone offers several options for organizing and accessing your voicemail.

Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

To turn Expert Mode on or off:

1. Press and hold 1 to access your voicemail. (If your voicemail box contains any new or saved messages, press * to access the main voicemail menu.)
2. Press 3 DEF to change your Personal Options, following the system prompts.
3. Press 4 GHI for Expert Mode.
4. Press 1 to turn Expert Mode on or off.

Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 customers.

1. Press and hold 1 to access your voicemail. (If your voicemail box contains any new or saved messages, press * to access the main voicemail menu.)
2. Press 3 DEF to change your Personal Options, following the system prompts.
3. Press 2 ABC for Administrative Options.
4. Press 5 JKL for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename, or delete group lists.

Sprint PCS Callback

Return a call after listening to a message without disconnecting from voicemail.

- Press 8 TUV after listening to a message. (Once the call is complete, you're returned to the voicemail main menu.)

Voicemail-to-Voicemail Message

Record and send a voice message to other Sprint PCS Voicemail users.

1. From the main voicemail menu, press 2 ABC to send a message.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record and send your voice message.

Voicemail-to-Voicemail Message Reply

Reply to a voice message received from any other Sprint PCS Voicemail user.

1. After listening to a voice message, press 2 ABC.
2. Follow the voice prompts to record and send your reply.

Voicemail-to-Voicemail Message Forwarding

Forward a voice message, except those marked “Private,” to other Sprint PCS Voicemail users.

1. After listening to a message, press 0 + and then 6 MNO.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

Voicemail-to-Voicemail Receipt Request

Receive confirmation that your voice message has been listened to when you send, forward, or reply to other Sprint PCS users.

1. After you have recorded a message, press to indicate you are satisfied with the message you recorded.
2. Press to mark receipt requested.
3. Press to send your voicemail message.

Continue Recording

When leaving a voice message, you can choose to continue recording even after you've stopped.

- Before pressing to indicate that you are satisfied with the message you recorded, press to continue recording.

Extended Absence Greeting

When your phone is turned off or you are off the Nationwide Sprint PCS Network for an extended period, this greeting can be played instead of your normal personal greeting.

1. From the main voicemail menu, press for Personal Options.
2. Press for greetings.
3. Press to record an Extended Absence Greeting.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

To clear the icon from the display screen:

1. Select **Menu** > **Messaging** > **Voicemail** > **Clear Envelope**.
2. Select **Yes** or **No** and press MENU OK.

Voicemail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines your phone's voicemail menu structure.

- 1 Listen
  - 1 Envelope Information
  - 2 ABC Reply
  - 3 DEF Advance 8 Seconds
  - 4 GHI Replay
  - 5 JKL Rewind
  - 6 MNO Forward Message
  - 7 PQRS Erase
  - 8 TUV Callback
  - 9 WXYZ Save
  - 0 Options
- 2 ABC Send a Message

- 3 DEF Personal Options
  - 1 Notification Options
    - 1 Phone Notification
    - 2 ABC Numeric Paging to a Sprint PCS Phone
    - * Shift Return to Personal Options Menu
  - 2 ABC Administrative Options
    - 1 Skip Passcode
    - 2 ABC Autoplay
    - 3 DEF Message Date & Time On/Off
    - 4 GHI Change Passcode
    - 5 JKL Group Distribution List
    - 6 MNO Return to Personal Options Menu
  - 3 DEF Greetings
    - 1 Personal Greetings
    - 2 ABC Name Announcement
    - 3 DEF Extended Absence Greeting
    - * Shift Return to Personal Options Menu
  - 4 GHI Expert Mode (On/Off)
- 9 WXYZ Place a Call
- * Shift Disconnect

Using Text SMS Messaging

With Text SMS Messaging, you can use a person's wireless phone number to send instant text messages from your Sprint PCS Phone to their messaging-ready phone – and they can send messages to you. When you receive a new message, it will automatically be displayed on your phone's screen.

In addition, Text SMS Messaging includes a variety of preset messages, such as "I'm running late, I'm on my way," that make composing messages fast and easy. You can also customize your own preset messages (up to 160 characters) from your Sprint PCS Phone or at www.sprint.com.

Composing Text SMS Messages

To compose a Text SMS message:

1. Select **Menu** > **Messaging** > **Send Message** > **Text** and select the entry method you prefer.
2. Select **Contacts**, **Mobile #**, or **Email** and press MENU OK.
3. Enter the number, or email address, or select the contact and select **Next** (). (You may include up to ten recipients per message.)
4. Compose a message using one of the following methods:
   - To type a message, use your keypad to enter your message. Use to select a character input mode.
   - To use a preset message, recent message, or an emoticon, select **Options** () and select **Preset Msg**, **Recent Msg**, or **Emoticons**. Press the number on the keypad that corresponds to the number next to the message or emoticon.

5. Select **Next** .

6. Review your message and press **Send** ( ). You may also select the following additional messaging options by pressing **Options** ( ):
   - **Edit** to edit the existing message before sending.
   - **Priority** to set the message priority level [**Normal** or **Urgent**].
   - **Call Back #** to set the callback number.
   - **Save to Drafts** to save the message without sending.

Accessing Text SMS Messages

To read a Text SMS message:

- When you receive a text message, it will automatically appear on your phone's main display screen. Use your navigation key to scroll down and view the entire message.

To reply to a Text SMS message:

1. While the message is open, select **Reply** ( ).
2. Compose your reply or use the preset messages or icons.
   - To type a message, use your keypad to enter your message. Use to select a character input mode.
   - To use a preset message or an emoticon, select **Options** ( ) and select **Preset Msg**, **Recent Msg**, or **Emoticons**. Press the number on the keypad that corresponds to the number next to the message or emoticon.
3. Select **Next** ( ).

4. Review your message and press **Send** (). You may also select the following additional messaging options by pressing **Options** ():
   - **Edit** to edit the existing message before sending.
   - **Priority** to set the message priority level [**Normal** or **Urgent**].
   - **Call Back #** to set the callback number.
   - **Save to Drafts** to save the message without sending.

Using Preset Messages

Preset messages make sending text messages to your friends, family, and co-workers easier than ever.

To add and/or edit preset messages:

1. Select **Menu** > **Messaging** > **Settings** > **General** > **Preset Messages**.
2. Select **Options** () and press **Add New**.

   – or –

   Highlight a message you wish to edit and select **Options** () and press **Erase** or select **Edit** ().
3. Enter your new message or changes and press MENU OK. (See “Entering Text” on page 41.)

Note:	You may also add or edit preset messages in the “My Online Tools” area at **www.sprint.com**

Using Voice SMS Messaging

In addition to sending and receiving Text SMS messages, your phone is enabled with Voice SMS Messaging. With Voice SMS Messaging, you can quickly and easily send a voice message to other SMS-enabled Sprint PCS Phones or working email addresses without making a phone call. Just record a message and send it directly to the recipient's phone messaging inbox.

Activating Voice SMS Messaging

To use Voice SMS Messaging capabilities, you will first need to register your phone. Once you have registered, incoming Voice SMS messages will be automatically downloaded to your phone.

To activate Voice SMS Messages:

1. When you turn on your phone, you will be prompted to register your phone to receive Voice SMS messages.
2. Select **Yes**. (When activation is complete, an activation confirmation screen appears.)

Note:	If you select **No** during step 2 above, you will see an alert message. If you select **No** after reading the message, incoming Voice SMS messages will not be downloaded to your phone.

Playing a Voice SMS Message

To play a Voice SMS message from the main menu:

1. Select **Menu > Messaging > Voice SMS**.
2. Select the message you want to play.
3. Press MENU OK to play the message.

4. Press **Reply** ( ) to reply to the message. (To display the message options, press **Options** [ ].)

Composing Voice SMS Messages

To compose a Voice SMS message:

1. Select **Menu > Messaging > Send Message > Voice SMS**.
2. Select **Mobile #** or **Email** to enter a recipient's wireless phone number or email address directly.
3. Select **Contacts Entry**.
4. Select your desired list and press

to select the recipient.
5. Press **Next** ( ) when you have finished selecting and entering recipients.
6. Start recording after the beep. (You can record up to two minutes.)
7. To finish recording, press **Done** ( ).
8. Press **Send** ( ) to send the voice message.

Accessing Voice SMS Messages

To play a Voice SMS message:

- When you receive a voice message, a pop-up notification will automatically appear on your phone's main display screen. Use your softkeys to view and play the voice message.

To reply to a Voice SMS message:

1. From the Voice SMS inbox, select the desired message.
2. Press **Reply** ( ).
3. Record your reply, then press **Send** ( ).

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

1. Press .
2. Enter the number you want to call.
3. Press .

To permanently block your number, call Sprint Customer Service.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- Press . (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- Press again.

Tip:	For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing ***70** before placing your call. Call Waiting is automatically reactivated once you end the call.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

To make a Three-Way Call:

1. Enter a number you wish to call and press .
2. Once you have established the connection, enter the second number you wish to call and press . (This puts the first caller on hold and dials the second number.)
3. When you're connected to the second party, press again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Note:	Call Waiting and Three-Way Calling are not available while roaming off the Nationwide Sprint PCS Network.

Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To activate Call Forwarding:

1. Press .
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press . (You will hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press .
2. Press . (You will hear a tone to confirm the deactivation.)

Note:	You are charged a higher rate for calls you have forwarded.

Sprint PCS Vision℠

In This Section

- Sprint PCS Vision Applications
- Getting Started With Sprint PCS Vision
- Accessing Messaging
- Downloading Premium Services Content
- Exploring the Web
- Sprint PCS Vision FAQs

Sprint PCS Vision℠ offers easy and amazing data services you will really use. These features – including Sprint TV℠, messaging, games, downloadable ringers and screen savers, and portable Web access – let you have fun, stay in touch, and stay informed no matter where you go on the Nationwide Sprint PCS Network.

This section introduces these advanced services and walks you through the necessary steps to start taking advantage of Sprint PCS Vision Services. For complete details and instructions, see the **Sprint PCS Vision User Guide** online at www.sprint.com.

Sprint PCS Vision Applications

Here is a brief list of the applications available through your Sprint Power Vision Phone. For more information, please see the **Sprint PCS Vision User Guide** online at www.sprint.com.

Sprint PCS Picture Mail[SM] Instantly shoot, share, and print sharp, high-resolution digital pictures, and take and send short video clips with your phone.

Messaging Send and receive emails and chat on your Sprint Power Vision Phone.

Sprint TV[SM] See and hear the latest news, sports, weather, and more in full-color video and vivid sound while on the go.

Music Stream music to the Sprint Media Player in your Sprint Power Vision Phone.

Games Play exciting games with full-color graphics, sound, and vibration.

Ringers Personalize your Sprint Power Vision Phone by downloading and assigning different ringers to numbers in your Contacts.

Screen Savers Download unique images to use as screen savers – or make it easy to tell who's calling by assigning specific images to numbers in your Contacts.

Web Experience full-color graphic versions of popular Web sites from your Sprint Power Vision Phone.

Getting Started With Sprint PCS Vision

This section will help you learn the basics of using your Sprint PCS Vision services, including managing your User name, launching a Vision connection, and navigating the Web with your Sprint Power Vision Phone.

Your User Name

When you buy a Sprint Power Vision Phone and sign up for service, you're automatically assigned a User name, which is typically based on your name and a number, followed by "@sprint.com." (For example, the third John Smith to sign up for Sprint PCS Vision services might have jsmith003@sprint.com as his User name.)

When you use Sprint PCS Vision services, your User name is submitted to identify you to the Nationwide Sprint PCS Network. The User name is also useful as an address for Sprint PCS Mail, as a way to personalize Web services, and as an online virtual identity.

Your User name will be automatically programmed into your Sprint Power Vision Phone. You don't have to enter it.

Finding Your User Name

If you aren't sure what your Sprint PCS Vision User name is, you can easily find it online or on your Sprint Power Vision Phone.

To find your User Name:

- **At www.sprint.com.** Sign on to your account using your Sprint PCS Phone number and Password. To display your User name, click on the **My Personal Information** menu, then click on **PCS Vision User Name**.

- **On your Sprint Power Vision Phone.** You can find your User name under the **Phone Info** option in your phone's **Settings** menu (**Menu** > **Settings** > **Phone Info** > **Phone Number**).

Launching a Sprint PCS Vision Connection

To launch a Sprint PCS Vision connection:

- Select **Menu** > **Web**. (Your Sprint PCS Vision connection will launch and the Sprint PCS Vision home page will be displayed.)

The Sprint PCS Vision Home Page

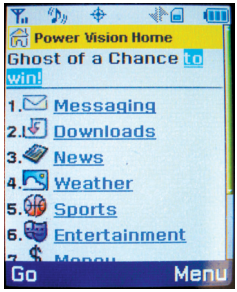

Shortcut:	You can also press the navigation key right to launch the Web.

Note:	If Net Guard is enabled and displayed (see page 193), select Connect or Always Connect and press **OK** to continue and launch the Web.

While connecting, the following will appear on the screen: **Vision Connecting....**

If you had a previous Sprint PCS Vision connection, the last page you visited may display when you launch your browser. When this occurs, you may not see the “Connecting...” message when you launch the session. Though the browser is open, you are not currently in an active data session — that is, no data is being sent or received. As soon as you navigate to another page, the active session will launch and you will see the “Connecting...” message.

Net Guard

When you first connect to the Web, the Net Guard will appear to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.

To change your Net Guard settings:

- Select **Menu** >**Settings** > **Power Vision** > **Net Guard**.
  - **On** to activate the Net Guard.
  - **Off** to deactivate the Net Guard.

Note:	When enabled, the Net Guard appears only once per session. The Net Guard does not appear if the phone is merely re-connecting due to a time-out.

Sprint PCS Vision Connection Status and Indicators

Your phone's display lets you know the current status of your Sprint PCS Vision connection through indicators which appear at the top of the screen. The following symbols are used:

Your Sprint PCS Vision connection is active (data is being transferred); the transmit/receive symbol will blink to indicate data transmission. Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the Sprint PCS Vision connection will terminate.

Your Sprint PCS Vision connection is dormant (no data is being sent or received). Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.

Your phone is not currently able to access Sprint PCS Vision service features.

Your phone is connected to a high-speed Sprint Power Vision connection.

A high-speed Sprint Power Vision connection is available.

The high-speed Sprint Power Vision connection is dormant.

Your high-speed Sprint Power Vision connection is active.

If no indicator appears, your phone does not have a current Sprint PCS Vision connection. To launch a connection, see “Launching a Sprint PCS Vision Connection” on page 192.

Navigating the Web

Navigating through menus and Web sites during a Sprint PCS Vision session is easy once you've learned a few basics. Here are some tips for getting around:

Softkeys

During a Sprint PCS Vision session, the bottom line of your phone's display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkey buttons directly below the phone's display screen.

Tip:	Depending on which Web sites you visit, the labels on the softkeys may change to indicate their function.

To use softkeys:

- Press the desired softkey button. (If an additional pop-up menu appears when you press the softkey button, select the menu items using your keypad [if they're numbered] or by highlighting an option and pressing MENU OK.)

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

To scroll line by line through Web sites:

- Press the navigation key up and down.

To scroll page by page through Web sites:

- Press the volume buttons on the side of the phone.

Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

To select onscreen items:

- Use the navigation key to highlight the desired item, then press the desired softkey button (or press MENU OK).

Tip:	You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "OK." If the items on a page are numbered, you can use your keypad (number keys) to select an item. (The tenth item in a numbered list may be selected by pressing the 0 key on your phone's keypad, even though the number 0 doesn't appear on the screen.)

Links, which appear as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

To select links:

- Highlight the link and press the appropriate softkey.

Going Back

To go back one page:

- Press the BACK key on your phone.

Note:	The **BACK** key is also used for deleting text (like a BACKSPACE key) when you are entering text.

Going Home

To return to the Sprint PCS Vision home page from any other Web page:

- Press and hold BACK.

  – or –

  Select **Menu** > **Home**.

Sprint PCS Messaging

Accessing Messaging

Now you can send and receive emails and text messages and participate in Web-based chatrooms right from your Sprint Power Vision Phone. Messaging allows you to stay connected to friends, family, and co-workers 24 hours a day anywhere on the Nationwide Sprint PCS Network.

Message Types

There are many types of text messaging available on your phone. These include Text and SMS Voice Messaging, Instant Messaging, Email, and Chat.

(Sprint PCS Voicemail provides voicemail-to-mailbox messaging. For information on using your phone's voicemail feature, see "Using Voicemail" on page 170.)

Accessing Sprint PCS Mail

Sprint PCS Mail allows you to perform many of the typical email functions from your Sprint Power Vision Phone that you can from your personal computer. You can manage your Sprint PCS Mail account from your Sprint Power Vision Phone or from your personal computer at www.sprint.com.

To access Sprint PCS Mail from your phone:

1. Select **Menu** > **Messaging** > **IM & Email** > **PCS Mail**. (If you're a first-time user, your phone will prompt you to set up your Sprint PCS Mail account by establishing a User name and password.)
2. Select the folder you wish to view, such as **Inbox** or **Compose**.

For information and instructions about reading, replying to, and composing Sprint PCS Mail, please see the Sprint PCS Vision Guide at www.sprint.com.

Accessing Additional Email Providers

With Sprint PCS Vision, you can use popular email services such as AOL® Mail, Yahoo!® Mail, MSN® Hotmail, and EarthLink® to keep in touch, even while you're on the go.

To access email providers from your Sprint Power Vision Phone:

1. From the Sprint PCS Vision home page, select **Messaging > Email**.
2. Select an email provider, such as **PCS Mail**, **AOL Mail**, **MSN Hotmail**, **Yahoo! Mail**, or **Earthlink**.
3. Use your keypad to enter the required sign-in information for the selected provider, such as user name, email address, and/or password, and select **OK.** (Your mailbox for the selected provider will be displayed.)

Note:	The information required for sign in will vary depending on the email provider you are accessing.

4. Follow the onscreen instructions to read, reply to, compose, send, and manage your email account.

Accessing Instant Messaging

Sprint PCS Vision also provides you with access to popular instant messaging (IM) clients, including AOL® Instant Messenger™, MSN® Messenger, and Yahoo!® Messenger.

To access instant messaging clients from your Sprint Power Vision Phone:

1. From the Sprint PCS Vision home page, select **Messaging** > **Instant Messaging**.
2. Select an IM provider, such as **AOL Instant Messenger**, **MSN Messenger**, or **Yahoo! Messenger**.
3. Use your keypad to enter the required sign-in information for the selected provider, such as user name and/or password, and select **OK**. (Your IM screen for the selected provider will be displayed.)

Note:	The information required for sign-in will vary depending on the instant messaging provider you are using.

4. Follow the onscreen instructions to read, reply to, compose, send, and manage your IM account.

Accessing Wireless Chatrooms

Sprint PCS Vision gives you the ability to join wireless chatrooms from your Sprint Power Vision Phone, to send text messages and icons to chatroom participants, or to launch a one-on-one (private) chatroom.

To access a chatroom from the browser:

1. Select **Menu** > **Web** > **Messaging** > **Chat & Dating** >**Jumbuck**.
2. Select Fast Flirting or Power Chat and select **Go** ( ).
3. Select **Link** ( ). (You will see a disclaimer for Wireless Chat.)
4. Select **I Agree** ( ) to accept the disclaimer.
5. Use your keypad to enter a nickname and select **OK** ( ). (The chat menu will be displayed.)
6. Select a chatroom from the menu (for example, "Friends" or "Singles") and press **Go** ( ) to enter.
7. Once in the chatroom, you may scroll through the postings to read messages from other chatroom participants and use your keypad to enter your own messages.

Note:	For information about posting to chatrooms or setting up one-on-one sessions, please see the Sprint PCS Vision Guide at www.sprint.com.

Downloading Premium Services Content

With Sprint PCS Vision, you have access to a dynamic variety of Premium Service content, such as downloadable Games, Ringers, Screen Savers, and other applications. (Additional charges may apply.) The basic steps required to access and download Premium Service content are outlined below.

Accessing the Download Menus

To access the Sprint PCS Vision download menus:

1. Select **Menu** > **My Content**.
2. Select the type of file you wish to download (**Games**, **Ringers**, **Screen Savers**, **Applications**, **IM & Email**, or **Call Tones**) and press MENU OK.
3. Select **Get New** and press MENU OK.

To access the Sprint PCS Vision download menus from the Web browser:

1. From the Sprint PCS Vision home page, select **Downloads**.
2. Select **Ringers**, **Screen Savers**, or **Applications** to go to the corresponding download menu. (For more information on navigating the Web, see “Navigating the Web” on page 195.)

Selecting an Item to Download

You can search for available items to download in a number of ways:

- **Featured** displays a rotating selection of featured items.
- **Categories** allows you to narrow your search to a general category, such as Movie/TV Themes for Ringers or College Logos for Screen Savers. (There may be several pages of available content in a list. Select **Next 9** to view additional items.)
- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search (for example, entering "goo" returns "Good Ol' Boy," "The Good, the Bad, and the Ugly," and "Goofy - Club").

Downloading an Item

Once you've selected an item you wish to download, highlight it and press MENU OK or press **OK** (). You will see a summary page for the item including its title, the vendor, the download detail, the file size, and the cost. Links allow you to view the **License Details** page, which outlines the price, license type, and length of license for the download, and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select **Buy**. (The item will download automatically. When the **New Download** screen appears, the item has been successfully downloaded to your phone.)

Note:	If you have not previously purchased an item, you will be prompted to create your purchasing profile.

2. Select an option to continue:

   - Select **Use** ( ) to assign the downloaded item (or to start, in the case of a game or application). Your Sprint PCS Vision session will end and you will be redirected to the appropriate phone menu screen.
   - Select **Shop** ( ) to browse for other items to download.
   - Press to quit the browser and return to standby mode.

Using My Content Manager

Whether you purchase your Premium Services content from your Sprint PCS Phone or from your online account management page at www.sprint.com, all of your purchases are stored in **My Content Manager** and may be downloaded to your phone from there.

My Content Manager is a storage area on the Nationwide Sprint PCS Network that is assigned specifically to your account. It allows you to store all of your Premium Service downloadable files. The files remain in My Content Manager until their license terms have expired – even after you have downloaded the content to your phone. This provides you with a convenient place to access information about your downloaded files without having to store the information in your phone's memory.

To access My Content Manager:

- From the Sprint PCS Vision home page, select **Downloads** > **My Content Manager**.

To download purchased content from My Content Manager:

1. From the **My Content Manager** display (see above), highlight the item you wish to download and press MENU OK. (The information page for the selected item will be displayed.)
2. Scroll to highlight **Download** and press MENU OK. (The item will download automatically. When the **New Download** screen appears, the item has been successfully downloaded to your phone.)
3. Select an option to continue:
   - Select **Use** (left softkey) to assign the downloaded item (or to start, in the case of a game or application). Your Sprint PCS Vision session will end and you will be redirected to the appropriate phone menu screen.
   - Select **Shop** (right softkey) to browse for other items to download.
   - Press END to quit the browser and return to standby mode.

For complete information and instructions on downloading **Games**, **Ringers**, **Screen Savers**, and **Applications**, see the Sprint PCS Vision Guide at www.sprint.com.

Web

Exploring the Web

With Web access, you can browse full-color graphic versions of your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores and breaking news and weather and shop on your Sprint Power Vision Phone anywhere on the Nationwide Sprint PCS Network.

In addition to the features already covered in this section, the Sprint PCS Vision home page offers access to these colorful, graphically rich Web categories, including **News, Weather, Entertainment, Sports, Finance, Travel, Shopping, Tools,** and **Business Links**, as well as useful management options including **My Account** and **Search**. Many sites are available under more than one menu – choose the one that's most convenient for you.

Using the Browser Menu

Navigating the Web from your phone using the Sprint PCS Vision home page is easy once you get the hang of it. For details on how to navigate the Web, select menu items, and more, see “Navigating the Web” on page 195.

Although the Sprint PCS Vision home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific Web sites, are not available. For these and other functions, you will need to use the browser menu. The browser menu offers additional functionality to expand your use of the Web on your Sprint Power Vision Phone.

Opening the Browser Menu

The browser menu may be opened anytime you have an active Sprint PCS Vision session, from any page you are viewing.

To open the browser menu:

- Press the right softkey. (The browser menu will be displayed in a drop-down list.)

Options available under the browser menu include:

- **Home.** Returns the browser to the Sprint PCS Vision home page.
- **Forward.** Returns you to a previously viewed page (after having used the BACK key).
- **Mark this Page.** Allows you to bookmark the current site.
- **View Bookmarks.** Allows you to access bookmarked sites, and manage your bookmarks.
- **Search.** Launches a Google search.
- **Send page to....** Allows you to send the current page as a text message.
- **Go to URL.** Allows you to navigate directly to a Web site by entering its URL (Web site address).
- **History.** Keeps a list of links to your most recently visited sites. To navigate to a site, highlight it and press MENU OK, then select **Connect**.
- **Refresh this page.** Reloads the current Web page.
- **More.** Displays additional options:
  - **Show URL.** Displays the URL (Web site address) of the site you're currently viewing.
  - **Restart Browser.** Refreshes the current browser session.

- **About Browser.** Displays technical information about the browser, its version, and the encryption version, and provides links to Certificate Information for the various components.
- **Preferences.** Displays all the preferences available for the browser.

Creating a Bookmark

Bookmarks allow you to store the address of your favorite Web sites for easy access at a later time.

To create a bookmark:

1. Go to the Web page you want to mark.
2. Press the right softkey to open the browser menu.
3. Select **Mark this Page** and press MENU OK to save the bookmark.
4. Press MENU OK to exit pop-up screen.

Note:	Bookmarking a page does not store the page's contents, just its address. **Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.**

Accessing a Bookmark

To access a bookmark:

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks**.
3. Scroll to highlight the bookmark you'd like to access and press MENU OK to go to the Web site (or press the number corresponding to the bookmark you wish to access).

Deleting a Bookmark

To delete a bookmark:

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks**.
3. Scroll to highlight the bookmark you'd like to delete and press **Options** ( ).
4. Select **Delete** and press MENU OK.
5. Select **OK** ( ) to confirm and remove the bookmark.
6. Press MENU OK to exit pop-up screen.

Going to a Specific Web Site

To go to a particular Web site by entering a URL (Web site address):

1. Press the right softkey to open the browser menu.
2. Select **Go to URL**.
3. Select the **URL** field and press MENU OK.
4. Use your keypad to enter the URL of the Web site you wish to go to and press MENU OK.

Note:	Not all Web sites are viewable on your phone.

Reloading a Web Page

To reload (refresh) a Web page:

1. Press the right softkey to open the browser menu.
2. Select **Refresh this Page**. (The browser will reload the current Web page.)

Restarting the Web Browser

If the Web browser appears to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

To restart the Web browser:

1. Press the right softkey to open the browser menu.
2. Select **More** > **Restart Browser**.

Sprint PCS Vision FAQs

How will I know when my phone is ready for Sprint PCS Vision service?

Your User name (for example, bsmith001@sprint.com) will be displayed in the **Phone Info.** listing in your phone's **Settings** menu.

How do I sign in for the first time?

You are automatically signed in to access Sprint PCS Vision services when you turn on your phone.

How do I know when my phone is connected to Sprint PCS Vision services?

Your phone automatically connects when Sprint PCS Vision service is used or an incoming message arrives. Your phone will also display the indicator. When you enter an area in which Sprint Power Vision service is available, you will see the icon.

Can I make calls and use Sprint PCS Vision services at the same time?

You cannot use voice and Sprint PCS Vision services simultaneously. If you receive a call while Sprint PCS Vision service is active, the call will be forwarded to voicemail. You can place an outgoing call anytime, but it will interrupt any in-progress Sprint PCS Vision session.

When is my data connection active?

Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls go directly to voicemail. When active, the or indicator flashes on your phone's display screen.

When is my data connection dormant?

If no data is received for ten seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period of time, the connection will terminate.

Can I sign out of data services?

You can sign out without turning off your phone; however, you will not be able to browse the Web or use other Sprint PCS Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time. To sign out, go to **Settings** > **Power Vision** > **Disable Vision** in your phone's menu.

Sprint Power Vision℠

In This Section

- Getting to Know Sprint Power Vision
- Exploring the Sprint Music Store℠
- Personalizing Your Service With On Demand
- Using Your Sprint PCS Phone as a Modem

With Sprint Power Vision℠ enjoy the next generation wireless data experience. Sprint Power Vision offers an enhanced, always-on experience, including rich, clear video and audio clips (up to five minutes in length), live interactive 3-D games, and Broadband-like download speeds. In addition, you can experience all the latest messaging, imaging and browsing enhancements currently available to Sprint PCS users.

Features such as the Sprint Music Store℠, On Demand personalized data services, and the option to use your phone as a modem make Sprint Power Vision your key to total connectivity. This section introduces these advanced high-speed services and walks you through the necessary steps to start taking advantage of Sprint Power Vision. For an updated listing of the latest products and services (which are subject to change) and for more information, visit us online at www.sprint.com.

Getting to Know Sprint Power Vision

Sprint Power Vision combines unmatched visual and sound clarity with Broadband-like speeds on your wireless phone. Utilizing the fastest commercially available wireless network technology (1xEV-DO) and leveraging continued investment in handset and application development, Sprint Power Vision offers the ultimate in wireless entertainment, real imaging solutions, instant communication, and a personalized information experience at Broadband-like speeds. Your A920 by Samsung® is equipped with the latest in multimedia, imaging and processing technology, and offers exclusive services not available on current Sprint PCS Vision Phones, such as access to the Sprint Music Store and On Demand.

Note:	The A920's data services work anywhere on the Nationwide Sprint PCS Network. These services will perform at enhanced speeds and with improved quality in areas with high-speed data coverage. Go to **www.sprint.com** or see our coverage map brochure for coverage details and more information.

Enabling Sprint Power Vision

Since Sprint Power Vision is an enhancement to your phone's Sprint PCS Vision capabilities, you don't need to take any extra action to make Sprint Power Vision available. As long as your phone's Sprint PCS Vision setting is enabled (see “Enabling and Disabling Sprint PCS Vision Services” on page 74), your phone is ready to access Sprint Power Vision services where available.

When your phone has a Sprint Power Vision connection, the status indicator ( ) will be displayed on the screen. (For details, see “Sprint PCS Vision Connection Status and Indicators” on page 194)

Exploring the Sprint Music Store℠

Your Sprint Power Vision service allows you to access the Sprint Music Store, an online music distribution site that lets you purchase and download digital music files to play on your Sprint Power Vision Phone.

Accessing the Sprint Music Store

You can access the Sprint Music Store right from your phone's main menu, anywhere on the Nationwide Sprint PCS Network. When you enter the store for the first time, you will be prompted to set up your user identification and password.

To access the Sprint Music Store:

1. Select **Menu > Music**.
2. Follow the onscreen instructions to establish your user ID and password.

Tip:	Your User ID for the Sprint Music Store is your ten-digit Sprint PCS Phone number. The password may be any four-digit number. The recommended password is the last four digits of your Social Security number.

3. Use your keypad and navigation key to explore the store.

Purchasing and Downloading Music

Now that you're in the store, you can shop for songs to purchase and download to your phone's TransFLASH card.

To find and download music files from the Sprint Music Store:

1. From the Sprint Music Store opening page, select an option to browse the store:
   - **Featured Music** offers a revolving selection of highlighted songs and artists.
   - **Categories** allows you to choose from categories such as What's Hot, New Releases, and specific musical genres.
   - **Search** gives you the option of searching for specific songs or artists. Just use your keypad to enter your search criteria in the available field.
2. Highlight the song you want and press MENU OK. (The song information screen will be displayed.)
3. Select an option and press MENU OK:
   - **Preview** to play an audio clip of the selected song.
   - **Buy Song** to purchase the song and download it to your phone's TransFLASH card.
     - When you select **Buy Song**, the file will automatically download to your phone's TransFLASH card. (If there is no TransFLASH card installed or if there is not enough free memory space on the card, you will see an alert.)
     - Once the song has been downloaded to your TransFLASH card, you will see options allowing you to listen to the song, add it to a playlist, or continue shopping.

Backing Up Your Downloaded Music Files

When you purchase and download a music file from the Sprint Music Store, you get two versions of the song: one to download and play on your A920 (file type: AAC+), and another to download from www.sprint.com and play on your PC (file type: WMA). The AAC+ files downloaded to your phone can only be played on your phone and on your account, and once they have been downloaded, they cannot be downloaded again without being repurchased.

Sprint recommends you back up your AAC+ music files to your PC so you may access the files in case your TransFLASH card is lost or damaged, or if you install a new TransFLASH card.

To back up your downloaded music files:

1. Open the TransFLASH access panel on the bottom right side of the phone and press in on the TransFLASH card to release the locking mechanism.
2. Remove the TransFLASH memory card and insert into the SD card adapter.
3. Insert the SD card adapter with the TransFLASH memory card into an SD card reader (sold separately), and then connect the reader to your PC via a USB cable.
4. Use your PC to navigate to the TransFLASH's Music folder.
5. Select and copy the music files to a folder on your PC's hard drive.

Note:	Although you can store AAC+ files on your PC, they will only be playable on your phone and on your account. If you copy the files to a new TransFLASH card, you will need to create a folder on the card called MUSIC to be able to play the music files.

Playing Music From the Sprint Music Store

The Sprint Music Store not only gives you access to great music, it also gives you a place to listen to and organize your music library.

Accessing the Music Player

1. From the Sprint Music Store opening page, use your right navigation key to select the **Player** tab.
2. From the Player display, select an option:
   - **All My Music** to browse through all of your downloaded music.
   - **<playlist>** to select a customized playlist you've created to organize your music.
   - **Create Playlist...** to set up a custom playlist of songs you like to hear together. Follow the onscreen instructions to create a name for the playlist, select songs by artist, genre, and title, and create an order for the playlist.
3. Once you've displayed a list of songs, you can browse through your available titles by Song, Artist, or Genre to select a specific song.
   - To play a song, select it and press **Play** (MENU OK).
   - To listen to a playlist, select it and press MENU OK to open the playlist, then press MENU OK again to begin playing from the selected song. (You can also highlight the playlist and use the softkey menu to begin listening.)

For more information about using the Sprint Music Store, visit the Sprint Web site at www.sprint.com/musicstore.

Personalizing Your Service With On Demand

The On Demand feature from Sprint Power Vision makes it easier than ever to retrieve the most popular Web information and categories instantly. On Demand uses the ZIP code you provide to customize the content it retrieves to your area, so you can get the information you want, when you want it.

On Demand acts like a PC browser's customized home page, displaying a variety of top categories such as News, Sports, Weather, Money, Movies, and more, tailored to your preferred area. These categories and the associated information are updated continuously throughout the day, so you'll always be up-to-date and in-the-know. In addition to presenting a number of fixed categories, On Demand also offers optional categories you can select (for an additional monthly charge), allowing you faster access to the information you really want.

Initializing Your On Demand Service

To initialize your phone's On Demand service:

1. Select **Menu > On Demand**.
2. Enter your preferred ZIP code and press **Done** ( ). (The On Demand service will customize itself to your selected location and the On Demand menu screen will be displayed.)

Accessing On Demand Information

Finding the information you're looking for with On Demand is as easy as navigating a Web browser on your PC. (The following examples will illustrate how to access News and Movies information.)

To access News information using On Demand:

1. Select **Menu > On Demand**. (The On Demand menu screen will be displayed.)
2. From the On Demand menu screen, highlight a category (in this case, **News**) and press MENU OK.
3. Depending on which category you select, you will see a menu with additional options. (For this example, you would be able to select from such subcategories as "Top Stories," "USA News," "World News," and "Politics.")
4. Select a subcategory, then select an article you would like to view and press MENU OK. (The article will be displayed.)
5. Use your navigation key to scroll through the article. If applicable, the left and right softkeys will offer additional options:
   - **Left Softkey** - If there is a related story or an image accompanying the article, that link will be available by pressing your left softkey. The left softkey functions as an action key in the On Demand service.
   - **Right Softkey** - Your right softkey will be a Menu button, allowing you to return to the main On Demand menu and offering additional navigation options.

To access Movies information using On Demand:

1. From the On Demand menu screen, highlight **Movies** and press MENU OK. (A list of current movie titles will be displayed.)
2. Select a movie title and press MENU OK.
3. From the Movie Title display, select an option and follow the onscreen instructions. Options available may include:
   - **Date** to select a date for the movie.
   - **Details** to view the movie's details, which may include cast, running time, plot synopsis, MPAA rating, reviews, etc.
   - **<theater listing>** to view the movie's showtimes at a number of selected movie theaters in your area. Follow the onscreen instructions to purchase will-call tickets (may not be available for all theaters or for all showtimes).

Additional fixed On Demand categories such as Money (which features a customizable stock ticker [delayed 20 minutes]), Weather, and Sports (which allows you to select your top teams), along with optional categories such as Maps and TV Guide, bring the information you want right to your screen – all without having to go through a traditional Web search.

Using Your Sprint PCS Phone as a Modem

Your Sprint Power Vision Phone's data capabilities enable you to use your phone's high-speed data connection as a modem for your desktop or laptop PC. You'll be able to send and receive email, browse the Internet, and access your company's network anywhere on the Nationwide Sprint PCS Network.

Note:	To use this service, you are required to sign up on a Sprint Power Vision with Phone as Modem plan. Go to www.sprint.com or visit a Sprint Store for phone as modem plan details and more information.

Setting Up a Data Connection With Your PC

In order to use your phone as a modem, you'll first need to load the Sprint PCS Connection Manager software on your PC, then use the supplied USB cable or built-in Bluetooth connection to connect your phone to your PC.

To set up your phone-to-PC data connection:

1. From your computer's traditional Internet connection, go to www.sprint.com and download the Sprint PCS Connection Manager software. (The software and drivers can be downloaded free of charge.)
2. Double-click on the downloaded file and follow the onscreen instructions to install the Sprint PCS Connection Manager software and drivers to your PC.
3. Once the software has been fully installed, connect your phone to your PC using the supplied USB cable or built-in Bluetooth connection. (Your PC will detect the connection and an icon will appear in your system tray.)
4. Launch the Sprint PCS Connection Manager software, select a profile, and click **Connect**.

5. Once the connection is established, launch an Internet session, check your email, or do anything else you would do using a traditional data connection.
6. When you're ready to terminate the data connection, double-click on the Sprint PCS Connection Manager icon in the system tray, then click **Disconnect** to end the session.
7. Remove the USB cable from your handset and PC.

Note:	While your data connection is active, you will not be able to receive incoming calls; all incoming calls will be forwarded to your Sprint PCS Voicemail. Placing an outgoing call during a data session terminates the data connection.
	Sprint PCS Vision services are available on the Nationwide Sprint PCS Network. Sprint Power Vision services work anywhere on the Nationwide Sprint PCS Network, but Broadband-like download speeds are available only in areas with high-speed data coverage.

Sprint PCS Voice Command℠

In This Section

- Getting Started With Sprint PCS Voice Command
- Creating Your Own Address Book
- Making a Call With Sprint PCS Voice Command
- Accessing Information Using Sprint PCS Voice Command

With Sprint PCS, reaching your friends, family, and co-workers has never been easier – especially when you're on the go. You can even listen to Web-based information, such as news, weather, and sports. Your voice does it all with Sprint PCS Voice Command.

This section outlines the Sprint PCS Voice Command service.

Getting Started With Sprint PCS Voice Command

With Sprint PCS Voice Command:

- You can store all your contacts' phone numbers, so you can simply say the name of the person you want to call.
- There's no need to punch in a lot of numbers, memorize voicemail passwords, or try to dial while you're driving.
- You can call anyone in your address book – even if you don't remember their phone number.
- You don't need to worry about losing your contacts or address book. This advanced service is network-based, so if you switch or happen to lose your Sprint PCS Phone, you won't lose your contacts or address book.

It's Easy to Get Started

There are two easy ways to sign up for Sprint PCS Voice Command:

- Sign up when you purchase and activate your phone.
- Just dial from your Sprint PCS Phone to contact Sprint Customer Service and sign up.

There is a monthly charge for Sprint PCS Voice Command.

Creating Your Own Address Book

You can program up to 500 names into your personal address book, with each name having up to five phone numbers. That's 2,500 phone numbers, and with the advanced technology of Sprint PCS Voice Command, you can have instant access to all of them.

There are four ways to update your address book:

- **On the Web.** Go to www.talk.sprintpcs.com and sign on with your Sprint PCS Phone Number and password to access a fully functional Web-based address book to create and update your contacts.
- **Use an Existing Address Book.** Automatically merge address books from desktop software applications with Sprint Sync℠ Services for no additional charge. Simply click on the "Click to synchronize" button within your Sprint PCS Voice Command personal address book at www.talk.sprintpcs.com.
- **Use Voice Recordings.** Simply dial and say, "Add name." You will then be asked to say the name and number you want to add to your personal address book. Your address book can store up to 20 voice-recorded names at once.
- **Call Directory Assistance.** If you don't have a computer or Internet access handy, you can have Sprint PCS Directory Assistance look up phone numbers for you and automatically add them to your address book. Just dial and say "Call operator" and we'll add two names and all the numbers associated with those names to your address book for our standard directory assistance charge.

Making a Call With Sprint PCS Voice Command

To make a call with Sprint PCS Voice Command:

1. Press and you'll hear the "Ready" prompt.
2. After the "Ready" prompt, simply say, in a natural voice, "Call" and the name of the person or the number you'd like to call. (For example, you can say, "Call Jane Smith at work," "Call John Baker on the mobile phone," "Call 555-1234," or "Call Bob Miller.")
3. Your request will be repeated and you will be asked to verify. Say "Yes" to call the number or person. (The number will automatically be dialed.) Say "No" if you wish to cancel.

Tip:	Keep in mind that Sprint PCS Voice Command recognizes not only your voice, but any voice, so that others can experience the same convenience if they use your phone.

For more helpful hints on Sprint PCS Voice Command, including a list of recognized commands and an interactive tutorial, visit www.talk.sprint.com.

Accessing Information Using Sprint PCS Voice Command

To access information using Sprint PCS Voice Command:

1. Press .
2. Say “Call the Web” and choose from a listing of information categories like news, weather, and sports.

– or –

Simply say “Call news room,” “Call the weather,” “Call Sports Central,” etc.

Note:	Sprint PCS Voice Command is not available while roaming off the Nationwide Sprint PCS Network.

Safety and Warranty Information

Important Safety Information

In This Section

- General Precautions
- Maintaining Safe Use of and Access to Your Phone
- Caring for the Battery
- Radiofrequency (RF) Energy
- Owner's Record
- Phone Guide Proprietary Notice

This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.
- Poor reception may be caused by inadvertently covering the internal antenna located inside the phone. If poor reception is being experienced, try to re-position your hand or use an optional listening device.

Note:	For the best care of your phone, only Sprint authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Phone

Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services and/or mobile phone features are in use. Check with your local service provider for details.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Tip:	Purchase an optional hands-free accessory at your local Sprint Store, or call the Sprint PCS Accessory Hotline℠ at 1-800-974-2221 or by dialing **#222** on your Sprint PCS Phone.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note:	Always turn off the phone in healthcare facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note:	Never transport or store flammable gas, flammable liquid, or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Sprint PCS Invoice.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently, there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Sprint is not aware of similar problems with Sprint PCS® Phones resulting from the proper use of batteries and accessories approved by Sprint or the manufacturer of your phone. Use only Sprint or manufacturer-approved batteries and accessories found at Sprint Stores or through your phone's manufacturer, or call 1-866-343-1114 to order. They're also available at www.sprint.com – click on the **Shopping** tab at top, then look under **Phones & Accessories**. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

  Less than one month:
  -4° F to 140° F (-20° C to 60° C)
  More than one month:
  -4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-Ion) Batteries

For safe disposal options of your Li-Ion batteries, contact your nearest Sprint authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Radiofrequency (RF) Energy

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your Sprint PCS Phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint supplied or approved carrying case, holster or other body-worn accessory. Use of non-Sprint approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Web site at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring, and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the A920 are:

CDMA mode (Part 22):

Head: 0.600 W/kg; Body-worn: 0.162 W/kg

PCS mode (Part 24):

Head: 1.28 W/kg; Body-worn: 0.789 W/kg

FCC Radiofrequency Emission

This phone meets the FCC Radiofrequency Emission Guidelines.

FCC ID number: A3LSPHA920.

More information on the phone's SAR can be found from the following FCC Web site: http://www.fcc.gov/oet/fccid.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Sprint Power Vision Phone A920 by Samsung®

Serial No.:

Phone Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Phone Guide template version 5A (September 2005)

Manufacturer's Warranty

In This Section

- Manufacturer's Warranty

Your Sprint PCS Phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your Sprint PCS Phone, please visit www.sprint.com and click on the "Terms & Conditions" link at the bottom or call Sprint Customer Service at 1-888-211-4PCS.

Manufacturer's Warranty

STANDARD LIMITED WARRANTY

What is Covered and For How Long? SAMSUNG TELECOMMUNICATIONS AMERICA, L.P. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/Pouch/Holster	90 Days
Game Pad	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

"THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;

"WARRANTIES OF TITLE OR NON-INFRINGEMENT;

"DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;

"THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR

"COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN.

SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, L.P.

1301 E. Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2005 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice. [011604]

Index

Numerics

3-Way Calling 186

A

Abbreviated Dialing 64
Airplane Mode 59
Alarm Clock 101
Answering Calls 32
Auto Answer Mode 62

B

Backlight 51
Battery 25–27
  Capacity 25
  Charging 27
  Installing 26
Bluetooth Wireless Technology 159–165
Bookmarks
  Accessing 207
  Creating 207
  Deleting 208
Browser Menu 205

C

Calculator 104
Call Answer Mode 62
Call Forwarding 187
Call Guard 79
Call History 81–85
  Erasing 85
  Making a Call 83
  Prepending a Phone Number 85
  Saving a Phone Number 84
Call Setup Options 63
Call Waiting 185
Caller ID 185
Camera 125–146
Chat 200
Contacts 87–95
  Adding a Phone Number 92
  Adding an Entry 88
  Dialing From 39
  Editing a Entry 94
  Editing a Phone Number 92
  Entry Options 91
  Erasing 72
  Finding Entries 89
Contacts Match 65
Countdown 106

D

Dialing Options 31
Display Language 63
Display Screen 18, 52
Downloads
  Sprint PCS Vision 201

E

Email 198
Entering Text 41–44
  ABC Mode 43
  Emoticons 44
  Numbers 44
  Preset Messages 44
  Symbols 44
  T9 Text Input 42

I

Instant Messaging 199

K

Key Functions 15

Key Tones 47

L
Location Settings 55
Lock Code
  Changing 70
Locking Your Phone 68

M
Making Calls 30
Media Player 151–157
  Playing Video and Audio Clips 154
Memo Pad 103
Menu Style 53
Messaging
  Deleting Old Messages 57
  Setting Alerts 56
  Signature 57
Modem
  Setting your Phone 220
Multimedia
  Channel Listings 153
  Channel Options 152
  FAQs 155
Music
  Accessing 213
  Backing Up 215
  Playing 216
  Purchasing 214
My Content
  Erasing 72
My Content Manager 203

N
Net Guard 193

O
On Demand Services 217

P
Phone (Illus.) 14
Phone Number
  Displaying 29
  Finding 37
  With Pauses 38
Phone Settings 45–65
  Auto Answer Mode 62
  Call Answer Mode 62
  Display Settings 51–54
  Location Settings 55
  Messaging Settings 56–58
  Sound Settings 46–50
  TTY Use 59–60
PictBridge Printing 147
Picture/Video
  Erasing 73
  Locking Pic/Video 69
Pictures
  Ordering Prints 127
  PictBridge 147
Plus (+) Code Dialing 39
Preset Messages 44

R
Resetting Your Phone 73
Restriction 65
Ringer Types 46
Roaming 75–79
  Setting Roam Mode 78

S
Scheduler 98–101
Security 67–74
  Security Menu 68

Silence All 50
Software
Updating 61
Special Numbers 71
Speed Dialing 40
Assigning Numbers 93
Sprint Customer Service 7
Sprint Music Store 213
Sprint PCS Mail 197
Sprint PCS Picture Mail
Downloading Pictures 143
Password 127
Sending 137–140
Uploading Pictures 143
Web Site 141
Sprint PCS Service
Account Passwords 6
Dialing Sprint PCS Services 95
Directory Assistance 8
Setting Up 3
Sprint PCS Vision 189–210
Applications 190
Chat 200
Downloading Content 201
FAQs 209
Home Page 192
Launching 192
Messaging 197
My Content Manager 203
Navigating the Web 195
Net Guard 193
Security Features 74
User Name 191
Sprint PCS Voice Command 223–227
Address Book 225
Making a Call 226
Sprint Service
Operator Services 9
Storing Pictures 132

T

T9 Text Input 42
Taking Pictures 126–131
Task List 105
Text Greeting 51
Text SMS Messaging 179–181
Three-Way Calling 186
TransFLASH Card 121
TTY Use 59–60
Turning Your Phone On and Off 24

U

Unlocking Your Phone 69
Updating your Phone Software 61

V

Videos
Recording 134
Storing 137
Voice Memos 119–120
Voice Services 107–118
Voice SMS Messaging 182–184
Voice-Activated Dialing 108–114
Voicemail
Menu Key 177
Options 173
Retrieving 172
Setting Up 5, 170
Volume 49

W
Web 205–209
World Time 106